


NOVA LUCE

9058127
Remote control

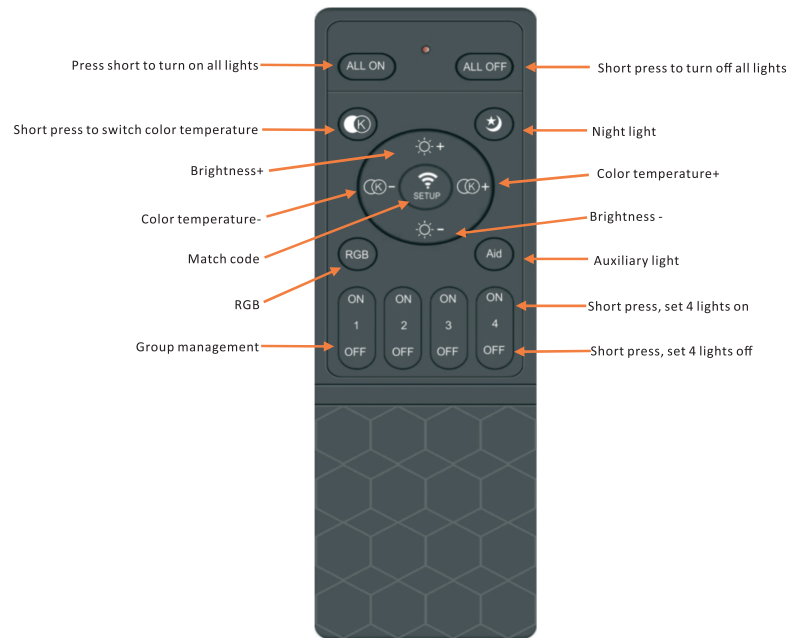

DIRECTIONS FOR USE


- 1.Code setting of the remote control: Press the"set up"button within 5 seconds after turning on the light until the light flashes.
- 2.Grouping code Press and hold the "2/3/4 group on and off"button for 5 seconds until the light flashes.
- 3.Clear code of remote control: Long press the main on button within 5 seconds of turning on the light until the light flashes.
- 4.RGB key description: short press RGB switch, open automatic gradient, long press to synchronize all lights to red.

Product parameters

Input voltage: DC:3V
Standby current 3~10uA
Indoor controllable distance:20m~30m
RF Frequency band: 2.4GHZ-2.483GHZ

Keyboard

Through the code operation with the lamp, the remote control and the lamp
After matching, the lamp can be controlled by remote control System.

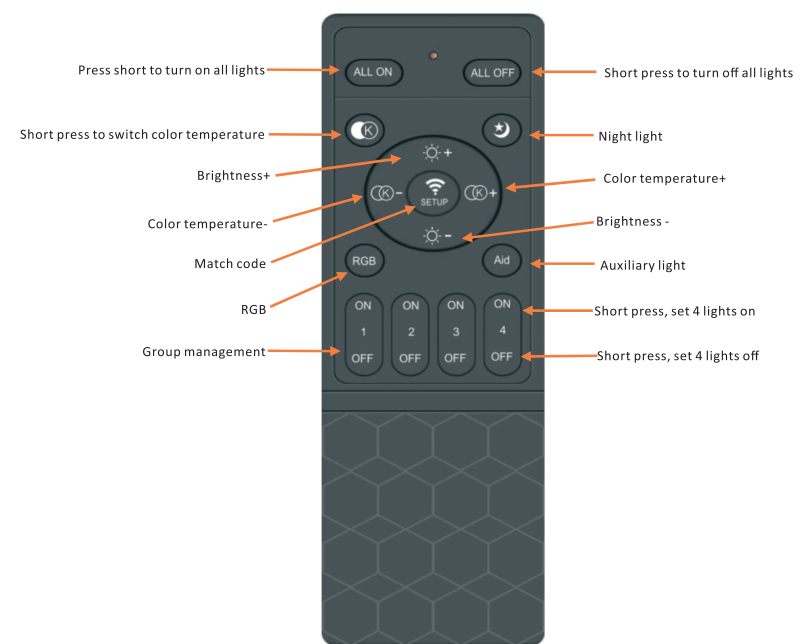

DIRECTIONS FOR USE

- 1.Code setting of the remote control: Press the"set up"button within 5 seconds after turning on the light until the light flashes.
- 2.Grouping code Press and hold the "2/3/4 group on and off"button for 5 seconds until the light flashes.
- 3.Clear code of remote control: Long press the main on button within 5 seconds of turning on the light until the light flashes.
- 4.RGB key description: short press RGB switch, open automatic gradient, long press to synchronize all lights to red.

Product parameters

Input voltage: DC:3V
Standby current 3~10uA
Indoor controllable distance:20m~30m
RF Frequency band: 2.4GHZ-2.483GHZ

Keyboard

Through the code operation with the lamp, the remote control and the lamp
After matching, the lamp can be controlled by remote control System.

