

INSTRUCTION FOR DC MOTOR CEILING FANREMOTE CONTROL

WIRING SCHEMATIC DIAGRAM FOR RECEIVER



POWER PARAMETER LIST


Voltage	Fan	Lamp
220~240V	35W	18W

Adopt RF wireless digit emission technique,biunique controlled,coincident code rate is less than one millionth,(Emitter and receiver must be sent back to factory for maintenance if damaged.)

Receiver can be controlled by any angles of the emitter in prescriptive space,unrestricted by direction.

With the memory function, the controller can save the status(light and direction)while the supply power OFF and resume to the original after reload the power supply.

FUNCTION INSTRUCTION OF EMITTER

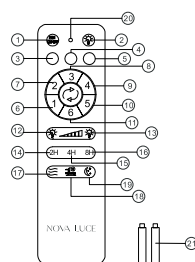


- ① FAN ON/Off
- ② ON/Off the light
- ③ Tri color (3000k)
- ④ Tri color (4000k)
- ⑤ Tri color (6500k)
- ⑥~⑪ Speed of the fan (1 low speed-6 high speed)
- ⑫~⑬ Light Dimmer
- ⑭~⑯ Timing control of the fan
- ⑰ Natural wind
- ⑱ Vacation mode
- ⑲ Sleep mode
- ⑳ LED indicated light
- ㉑ Dry cell

Remark:
According to the different models, it will have a little different, please in kind prevail

KINDLY REMINDERS:


- Code matching: Long press the "Ⓢ" button 3s within 10s of power-on to match the code, and the buzzer "beeps", the code matching is successful, and the code can be checked only once
- When the emitter cannot control the receiver, please check the battery switch touching normally or not, correction of the positive and negative, full or empty of the power.
- Low voltage of battery will affect the sensitivity of the emitter and the signal reception accordingly (the indicated light will flash out its warning when the battery get low voltage), must replace if the battery is getting low voltage.
- Please take out the battery from the emitter when leaving unused for long time.
- When installing the fan, the fan ceiling cover don't press the antenna (or other wire), it is easy to breakdown the wire and short-circuited
- Supporting 200W lighting power at maximum

PS: please connect the ground wire correctly, otherwise it may cause the light micro-light or flash

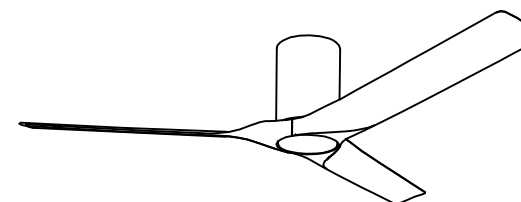

BEFORE INSTALLATION

Unpack your fan and check contents. You should have the following:

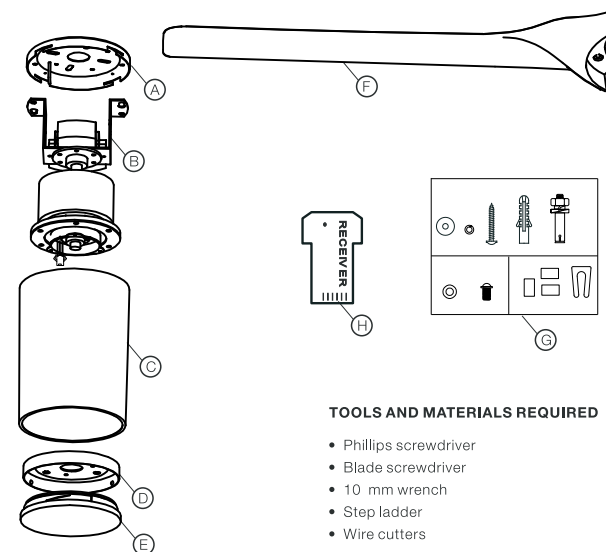

TOOLS AND MATERIALS REQUIRED

- Phillips screwdriver
- Blade screwdriver
- 10 mm wrench
- Step ladder
- Wire cutters

INSTALLATION PREPARATION:

To prevent personal injury and damage, ensure that the hanging location allows the blades a clearance of 7 feet from the floor and 2.5 feet from any wall or obstruction.

This ceiling fan lamp can only be mounted on a ceiling in a non-beveled (non-concave) condition.

HANGING BRACKET INSTALLATION

Turn off circuit breakers to current fixture from breaker panel and be sure operating light switch is turned to the OFF position.

WARNING:

Failure to disconnect power supply prior to installation may result in serious injury.



INSTALLATION

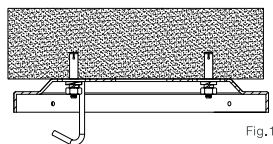


Fig.1


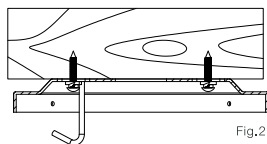


Fig.2


INSTALLING THE MOUNTING BRACKET

For concrete ceiling, drill two holes in the ceiling and secure the mounting bracket to the ceiling with two 0.32" (8mm) (distance between the two holes should be appropriate) expansion screws, flat washers, nuts provided and tighten with a spanner. Fig.1


For wood ceiling, Secure the mounting bracket to the ceiling is capable of carrying a load of at least 100lbs (45kg) with two long mounting screws and washers provided. Be sure at least 0.12" (30mm) of the screw is threaded into the support. Fig.2

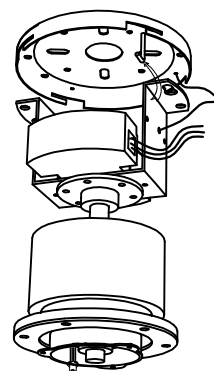

The hook hangs on the hole of the motor to facilitate installation. Fig.3

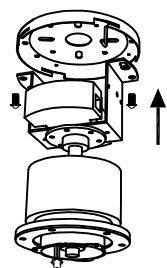


Fasten the main body to the ceiling plate with screws. Fig.5

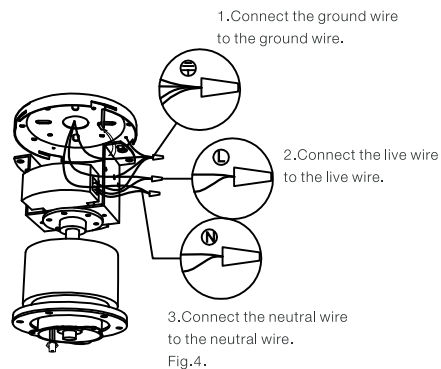

1. Connect the ground wire to the ground wire.

2. Connect the live wire to the live wire.

3. Connect the neutral wire to the neutral wire. Fig.4.

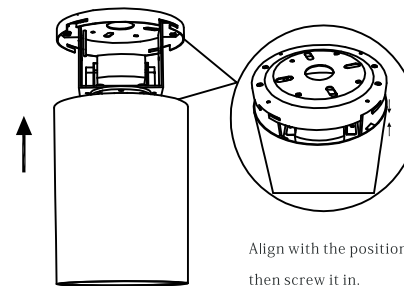

Align with the positioning slot, then screw it in.

Fig.6

Secure the fan blades to the motor with screws.

Fig.7

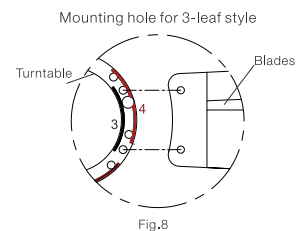
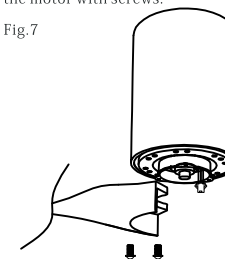


Fig.8

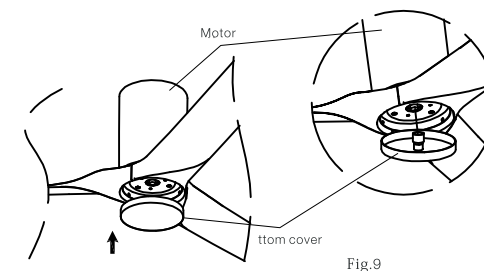


Fig.9

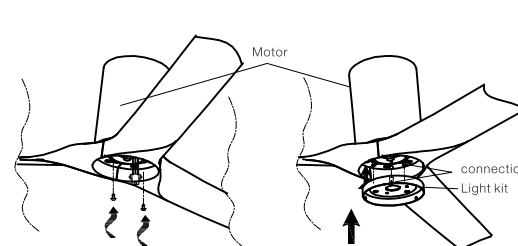


Fig.10

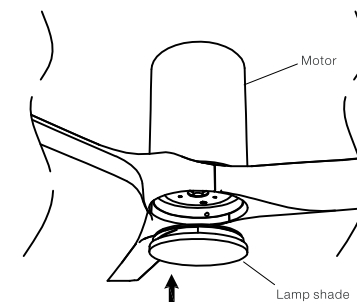


Fig.11