



1

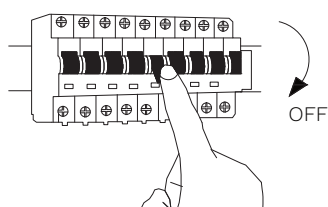

Turn off the general switch


2

Concrete Ceiling

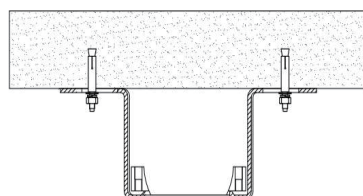

Drill the holes
and secure the mounting bracket
with two expansion screws,
flat washers and nuts


Wood Ceiling

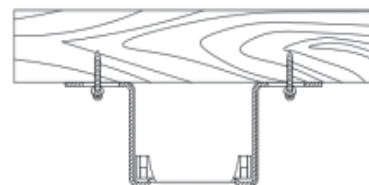

OR


Drill the holes
and secure the mounting bracket
with two long mounting screws
and washers provided

4

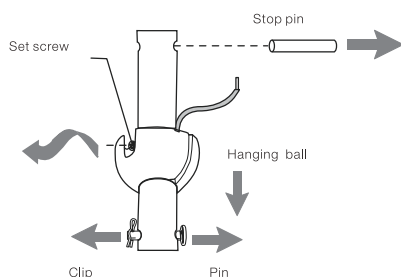


Loosen parts at the yoke
of the downrod assembly

5

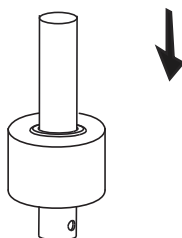


Assemble the canopy and collar cap
as shown in the figure

6

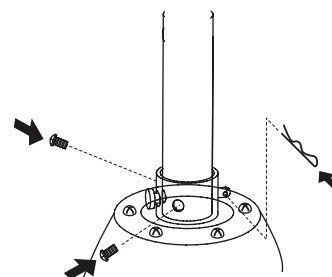


Insert the connecting bolt
into the suspender
and shown in the figure

7

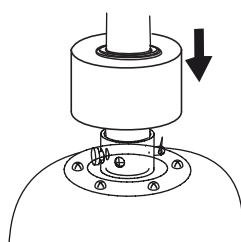


Cover the lid in the direction
of the arrow

8

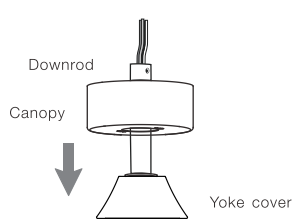

Install the canopy
as shown in the drawing

9

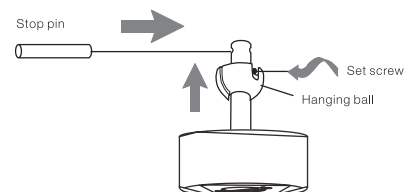


Install the hanging ball
as shown in the drawing



NOVA LUCE


9952393 / 9952394

10

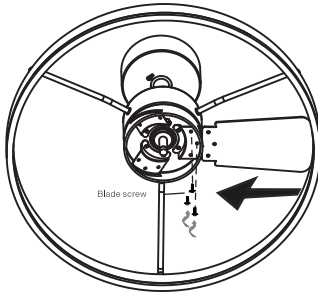


Install and fix the fan blades as shown in the drawing

11

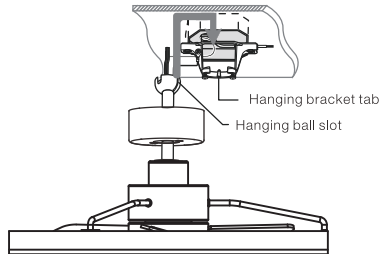



Install and fix the fan on the bracket as shown in the drawing

12

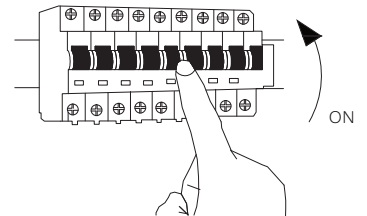

Turn on the general switch

Fan blades to the ground shall note less than 2.3 meters

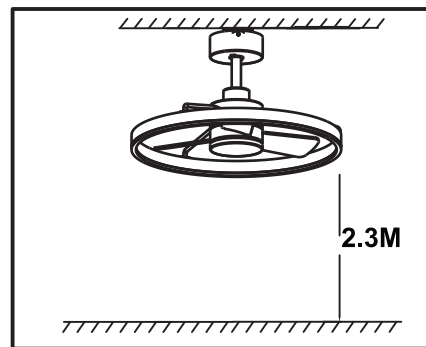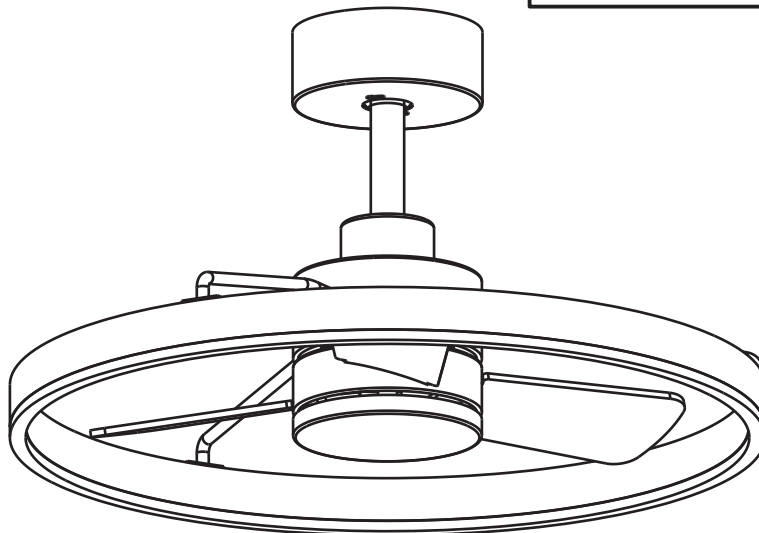


Wiring of ceiling fan

There are total of 8 wires coming out from the top of the motor:

Red	- Motor wire
Pink	- Motor wire
Gray	- Motor wire
White	- Neutral wire (N)
Green/yellow	- Earth wire 
Blue	- Light wire (L)

Connect the fan wires to the incoming power supply wires according to the indicated/respective wires.


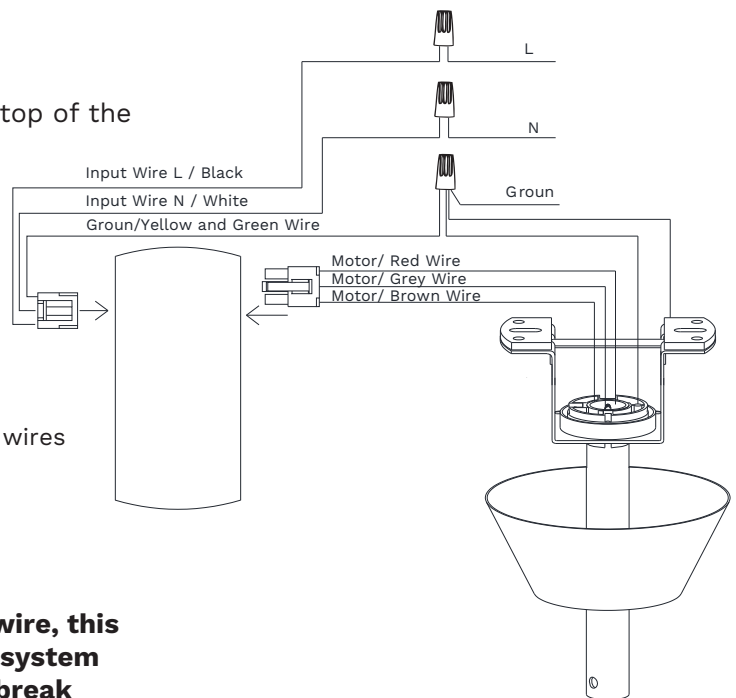


Note:

The earth wire must be longer than the safety wire, this is to ensure that in any event if the suspension system fails, the (L) live wire and (N) neutral wire will break first, leaving the fan to remain earthed so as to avoid being electrocuted.

Installation of the canopy

After the wrings are done up, tuck in the wires neatly and fix the canopy to the mounting/hanger bracket, locate the two key holes, align the two screw to the key holes, push up and twist to lock the canopy in position. Tighten the 2 screws firmly.

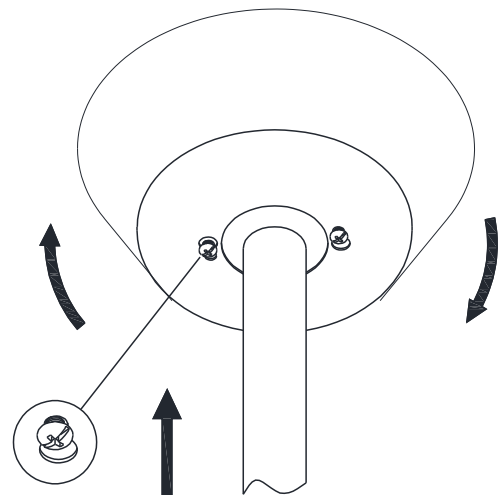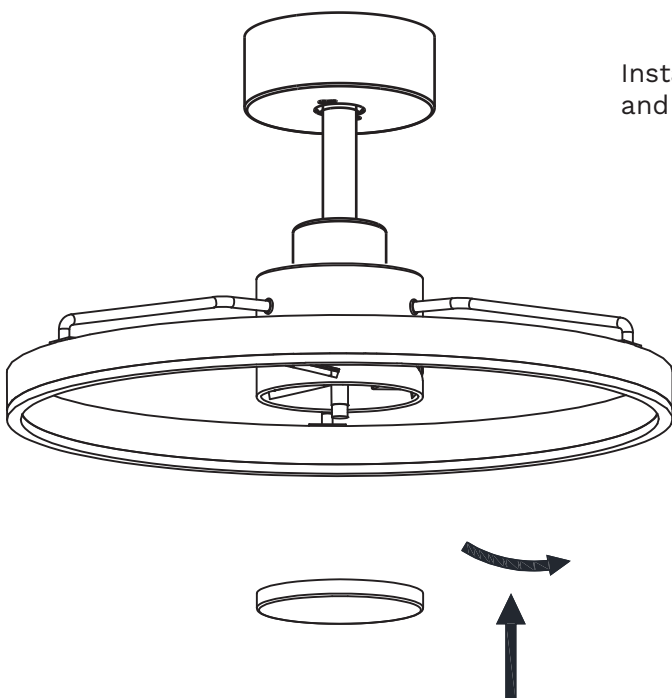

Install it in the fan without a lamp as shown in the diagram, and make sure to align it with the motor's axis

Remote control and wiring instructions

WIRING INSTRUCTIONS: Before doing wiring, ensure that you have shut down the power supply

Your fan is supplied with a radio frequency remote control unit and does not have a pull switch for speed control.

The fan can only be controlled by remote control which you can find it in the box.

CODING RESET

If you have multiple devices or controller matching issues please follow the steps below to reset codes:

1. Press and hold on the key more than 3s to code the receiver powered in 10s
2. If the controller and receiver code successfully, the buzzer will ring twice

NOTE


An existing wall dimmer switch must be replaced with a single ON/OFF wall switch before installing a fan to ensure consistent power flow from the switch to the fan. You cannot operate our ceiling fan with a wall dimmer switch

Power Specifications

Voltage	Fan	Led	Transmitter batteries
220-240V~50Hz	26W	3000K/4000K/6000K/ 36W	AAA 1.5V x2 (included)

Transmitter function keys

	Light & Fan all OFF
1-6	Fan Speed
	1-6 Fan Speed Circulation
	Forward / Reverse Switch
	Fan OFF
	Silent mode
	Light ON / OFF
-	Brightness -
+	Brightness +
	Anti-theft
1H	Fan Stop After 1 Hour
2H	Fan Stop After 2 Hours
4H	Fan Stop After 4 Hours

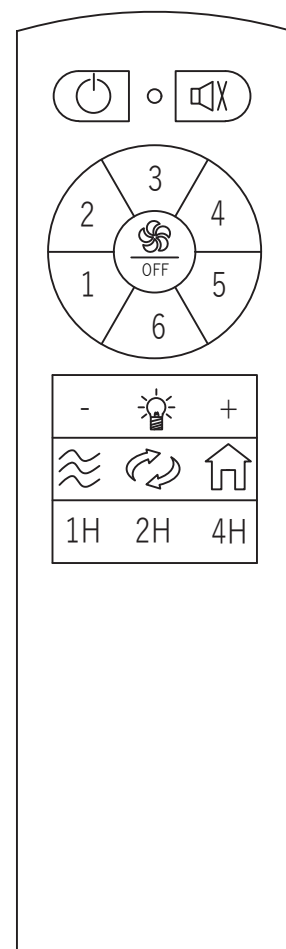

ATTENTION:

To ensure safe and proper operation and installation of your ceiling fan, be sure to read the instructions and review the diagrams thoroughly before beginning

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Children should be supervised to ensure that they do not play with the appliance

CAUTION:

To avoid possible electric shock, be sure that the electricity is turned off at the main switch or breaker before any installation is done. The fan shall be installed in accordance with national wiring regulations. If you are unfamiliar with the methods of installing electrical wiring, please consult a qualified electrician.

SAFETY PRECAUTION:

1. The installation work must be carried out by a qualified electrician
2. Turn off the electrical mains switch at the circuit breaker fuse box before performing any installation / electrical work
3. The ceiling fan must be grounded / earth, electrical supply of 230Vac 50Hz
4. The supply wires Live & Neutral must be connected to the wall switch (double poles) having a contact separation at least 3mm in all poles
5. The fan must be mounted with the fan blades at least 2.3m from the floor to minimize the possibility of accidental contact with the fan blades
6. When assembling the fan, be sure that the down rod is threaded firmly to the fan body and make sure that the down rod set screw is set tightly against the down rod after the fan is assembled to avoid unthreading
7. Do not mount the fan in an area where the fan could possibly get wet.
8. Do not insert anything into the fan blades while the fan is in operation
9. Make sure that your installation will not allow rotating fan blades to come into contact with any object
10. After the ceiling fan is completely installed, make sure that all connections from falling secure to prevent fan
11. Users recommended to examine the suspension system once yearly
12. Make sure the fan is off and fully stop before switching the directional (reverse/forward) switch

WARNING

To reduce the risk of fire or electric shock.

Do not use this fan with any solid-state speed control device.

To reduce the risk of personal injury, do not bend the fan blades when installing balancing the blades or cleaning the fan.

Use this unit only in the manner intended by the manufacturer to avoid any hazards.

When cutting or drilling into wall or ceiling, do not damage the electrical wiring and other hidden utilities