

Remote control and Wiring instructions

WIRING INSTRUCTIONS: Before doing wiring, ensure that you have shut down the power supply!

Your fan is supplied with a radio frequency remote control unit, and the fan does not have a pull switch for speed control, the fan can only be controlled by remote control. You can find the unit in the box. Before connecting the wiring.

CODING RESET

If you have multiple devices or controller matching issues, please follow the steps below to reset the codes:

1. Press and hold on the  key more than 3s to code the receiver powered in 10s.
2. If the controller and receiver code successfully, the buzzer will ring twice.

NOTE


An existing wall dimmer switch must be replaced with a single ON/OFF wall switch before installing a Fan to ensure consistent power flow from the switch to the fan. You cannot operate our ceiling fan with a wall dimmer switch.

Power Specifications

Voltage	220-240V 50/60HZ
Fan	23W
Led	3000K/4500K/6500K 18W/ 18W /18W
Transmitter batteries	AAA 1.5V x2 (included)


Transmitter function keys

ALL OFF	Light&Fan all OFF
1-6	Fan Speed
	1-6 Fan Speed Circulation
F/R	Forward/Reverse Switch
FAN/OFF	Fan Off
	Code Key
	Light On/Off
	Color temperature switching
	Night light
	Brightness -
	Brightness +
	Color Temperature-
	Color Temperature+
2H	Fan Stop After 2 Hour

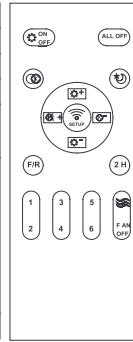

PROBLEM SUGGESTED REMEDY

1. If fan does not start:	1. Check main and branch circuit fuses or circuit breakers. 2. Make sure that the wall control is turned "ON". CAUTION: Make sure main power is turned off.
2. If fan sounds noisy:	1. Make sure all screws in motor housing are snug. (not over tightened) 2. Make sure the screws which attach the fan blade bracket to the motor are tight 3. Make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. CAUTION: Make sure main power is turned off before entering switch housing. 4. Some fan motors are sensitive to signals from Solid State variable speed controls. DO NOT USE a Solid State variable speed control 5. Allow "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period.
3. If fan wobbles	All blades are weighed and grouped by weight. Natural woods vary in density which could cause the fan to wobble even though all blades are weight-matched. The following procedures should eliminate most of the wobble. Check for wobble after each step. 1. Check that all blades are screwed firmly into blade holders. 2. Check that all blade holders are tightened securely to motor. 3. Make sure that canopy and mounting plate are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist. 4. Most wobble problems of fan are caused when blades are not in equal level. To check the blade levels, select a point on the ceiling above the tip of any blade. Measure the distance from the ceiling to the blade tip, to an accuracy of 1/8 inch. Rotate the blades until the next blade is in the measuring position. Repeat measurement for each blade. If all blade levels are not equal, you can adjust blade levels by the following procedure. To adjust a blade tip down, insert a washer (not supplied) between the blade and blade bracket at the screw closest to the motor. To adjust a blade tip up, insert washer (not supplied) between the blade and blade bracket at the two screws farthest from the motor. 5. Interchanging two adjacent blades could redistribute the weight and possibly result in smoother operation.
4. If light does not work:	1. Check blue wire from fan to make sure it is connected to hot wire from supply wire coming out of the ceiling. 2. Check for loose or disconnected wires in fan switch housing. 3. Check for loose or disconnected wires in light kit. 4. Check for faulty light bulbs. CAUTION: Make sure main circuit is turned off before entering switch housing.

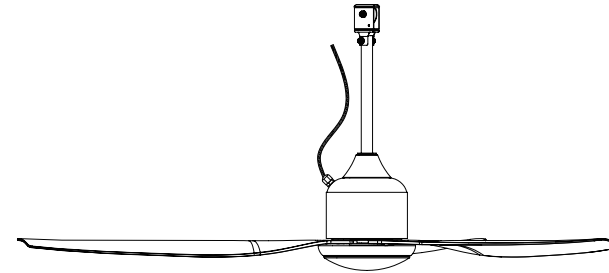

Attention:

To ensure safe and proper operation and installation of your ceiling fan, be sure to read the instructions and review the diagrams thoroughly before beginning.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children should be supervised to ensure that they do not play with the appliance.

Caution:

To avoid possible electric shock, be sure that the electricity is turned off at the main switch or breaker before any installation is done. The fan shall be installed in accordance with national wiring regulations.

If you are unfamiliar with the methods of installing electrical wiring, please consult a qualified electrician.

SAFETY PRECAUTION:

1. The installation work must be carried out by a qualified electrician.
2. Turn off the electrical mains switch at the circuit breaker fuse box before performing any installation/electrical work.
3. The ceiling fan must be grounded/earth, electrical supply of 230Vac 50Hz.
4. The supply wires Live & Neutral must be connected to the wall switch (double poles) having a contact separation at least 3mm in all poles.
5. The fan must be mounted with the fan blades at least 2.3m from the floor to minimize the possibility of accidental contact with the fan blades.
6. When assembling the fan, be sure that the down rod is threaded firmly to the fan body, and make sure that the down rod set screw is set tightly against the down rod after the fan is assembled to avoid unthreading.
7. Do not mount the fan in an area where the fan could possibly get wet.
8. Do not insert anything into the fan blades while the fan is in operation.
9. Make sure that your installation will not allow rotating fan blades to come into contact with any object.
10. After the ceiling fan is completely installed, make sure that all connections are secure to prevent fan from falling.
11. Users are recommended to examine the suspension system once yearly.
12. Make sure the fan is off and fully stop before switching the directional (reverse/forward) switch. (If any).

WARNING

To reduce the risk of fire or electric shock. Do not use this fan with any solid-state speed control device.

To reduce the risk of personal injury, do not bend the fan blades when installing, balancing the blades or cleaning the fan. Use this unit only in the manner intended by the manufacturer to avoid any hazards.

When cutting or drilling into wall or ceiling, do not damage the electrical wiring and other hidden utilities to avoid any hazards.

Make sure the fan is switched off before any maintenance or servicing is done to avoid any hazards.



TOOLS AND MATERIALS REQUIRED


- Philips screw driver
- Blade screw driver
- 11 mm wrench
- Step ladder
- Wire cutters




Package Contents

Unpack your fan and check the contents. You should have the following items.


1. Canopy x1
2. Downrod x2
3. Coupling Cover x1
4. Fan host x1
5. LED and lamp panel x1
6. Acrylic shade x1
7. Fan leaf x3
8. Remote control x1
9. Power cord x1
10. Installation instructions x1
11. Assembly kit x1

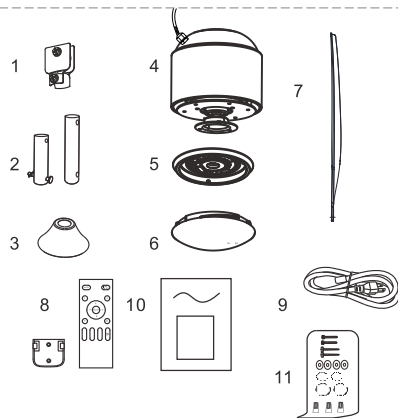


Installation Steps

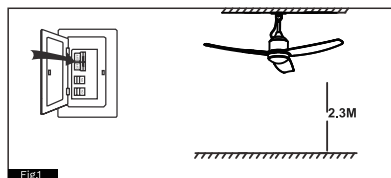


Turn OFF the electric circuit at the main fuse or circuit breaker box.
Fan blades to the ground shall not be less than 2.3 meters.

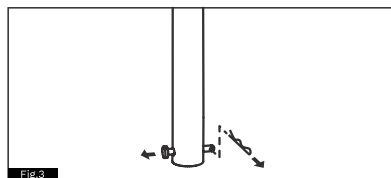


Loosen parts at the yoke of the downrod assembly.

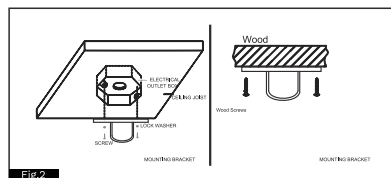


The mounting bracket must be securely fastened to a structural ceiling member.
To use wood screws to fix bracket for wooden or false ceiling.

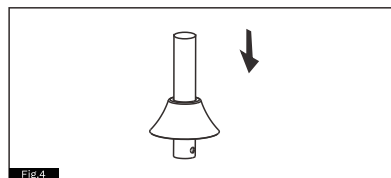


Assemble the Canopy and collar cap as shown in the figure.

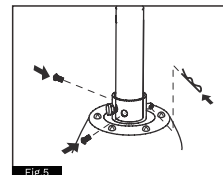


Insert the connecting bolt into the suspender and shown in the figure.

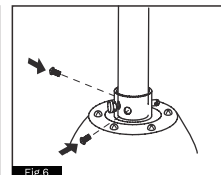


Tighten the two screws on the Coupling.

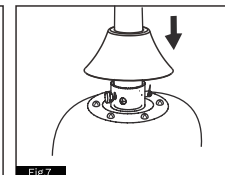


Cover the lid in the direction of the arrow.

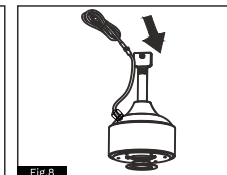


Connect the power cord and fan power cord according to the diagram.

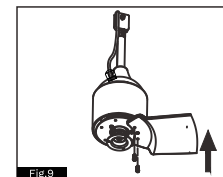


Install the fan leaf on the ceiling fan according to the diagram.

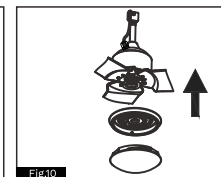


Install LED and the lampshade on the ceiling fan according to the diagram.

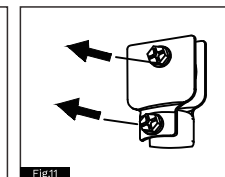


Remove the screws.

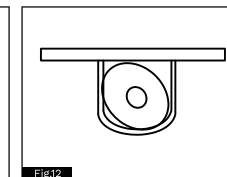


Install the lifting wheel onto the hook.

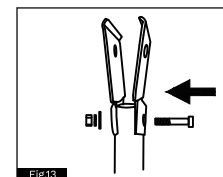


Install the suspension wheel clamp onto the suspension downrod according to the diagram.

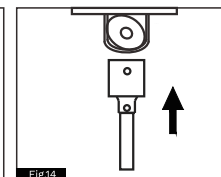

Assemble the suspension downrod and suspension wheel with the assembled clamp together.

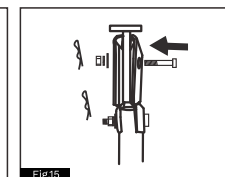

Insert the screw and tighten the nut according to the diagram, and finally insert the R pin into the hole at the bottom of the screw.

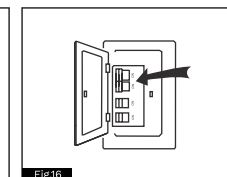

Connect the power cord and fan power cord according to the diagram.