

Remote control and Wiring instructions

WIRING INSTRUCTIONS: Before doing wiring, ensure that you have shut down the power supply!
Your fan is supplied with a radio frequency remote control unit, and the fan does not have a pull switch for speed control, the fan can only be controlled by remote control. You can find the unit in the box. Before connecting the wiring.

CODING RESET

If you have multiple devices or controller matching issues, please follow the steps below to reset the codes:

1. Press and hold on the  key more than 3s to code the receiver powered in 10s.
2. If the controller and receiver code successfully, the buzzer will ring twice.

NOTE

 
 
An existing wall dimmer switch must be replaced with a single ON/OFF wall switch before installing a Fan to ensure consistent power flow from the switch to the fan. You cannot operate our ceiling fan with a wall dimmer switch.

Power Specifications

Voltage	Fan	Led	Transmitter batteries
220-240V-50Hz	26W	3000K/4000K/6000K 18W/ 18W /18W	AAA 1,5V x2 (included)

Transmitter function keys

ALL OFF	Light&Fan all OFF
1-6	Fan Speed
	1-6 Fan Speed Circulation
F/R	Forward/Reverse Switch
FAN/OFF	Fan Off
	Code Key
      	Light On/Off Color temperature switching Night light Brightness - Brightness + Color Temperature- Color Temperature+
2H	Fan Stop After 2 Hour

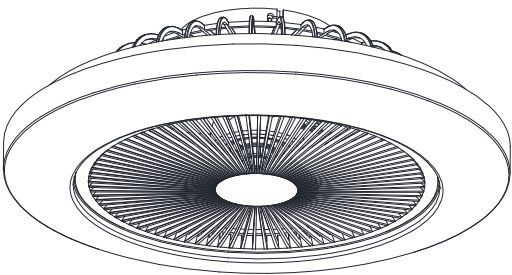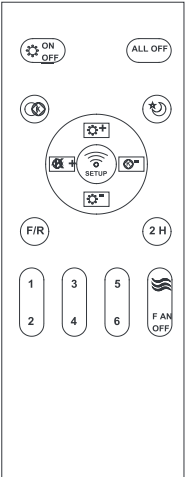

Attention:

To ensure safe and proper operation and installation of your ceiling fan, be sure to read the instructions and review the diagrams thoroughly before beginning.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children should be supervised to ensure that they do not play with the appliance.

Caution:

To avoid possible electric shock, be sure that the electricity is turned off at the main switch or breaker before any installation is done. The fan shall be installed in accordance with national wiring regulations. If you are unfamiliar with the methods of installing electrical wiring, please consult a qualified electrician.

SAFETY PRECAUTION:

1. The installation work must be carried out by a qualified electrician.
2. Turn off the electrical mains switch at the circuit breaker fuse box before performing any installation/electrical work.
3. The ceiling fan must be grounded/earth, electrical supply of 230Vac 50Hz.
4. The supply wires Live & Neutral must be connected to the wall switch (double poles) having a contact separation at least 3mm in all poles.
5. The fan must be mounted with the fan blades at least 2.3m from the floor to minimize the possibility of accidental contact with the fan blades.
6. When assembling the fan, be sure that the down rod is threaded firmly to the fan body, and make sure that the down rod set screw is set tightly against the down rod after the fan is assembled to avoid unthreading.
7. Do not mount the fan in an area where the fan could possibly get wet.
8. Do not insert anything into the fan blades while the fan is in operation.
9. Make sure that your installation will not allow rotating fan blades to come into contact with any object.
10. After the ceiling fan is completely installed, make sure that all connections are secure to prevent fan from falling.
11. Users are recommended to examine the suspension system once yearly.
12. Make sure the fan is off and fully stop before switching the directional (reverse/forward) switch. (If any).

WARNING

To reduce the risk of fire or electric shock. Do not use this fan with any solid-state speed control device. To reduce the risk of personal injury, do not bend the fan blades when installing, balancing the blades or cleaning the fan. Use this unit only in the manner intended by the manufacturer to avoid any hazards. When cutting or drilling into wall or ceiling, do not damage the electrical wiring and other hidden utilities to avoid any hazards. Make sure the fan is switched off before any maintenance or servicing is done to avoid any hazards.



TOOLS AND MATERIALS REQUIRED

- Philips screw driver
- Blade screw driver
- 11 mm wrench
- Step ladder
- Wire cutters

 
 


Package Contents


Unpack your fan and check the contents.

You should have the following items.

1. Bracket x1
2. Fan host x1
3. Assembly kit x1
4. Remote control x1

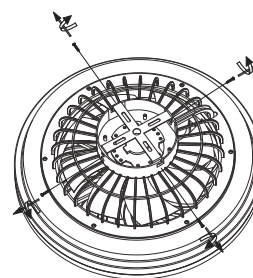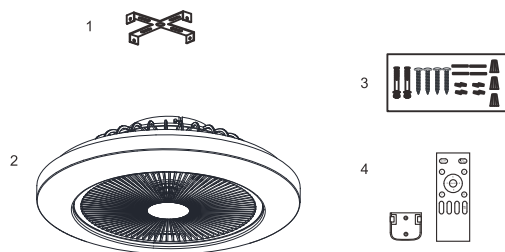

 1. As shown in the figure, remove and unscrew the four screws of the fixed bracket

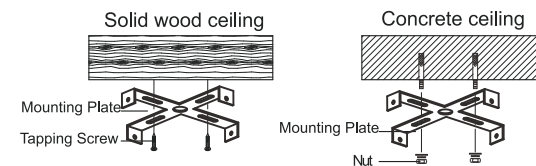

2. Fix the mounting plate to the wooden ceiling using big tapping screws NOTE: If the ceiling is concrete, drill a hole of 6MM with a power drill, push the anchor into the hole with a hammer, and then use nuts to lock the mounting plate.

TRANSMITTER SPECIFICATION



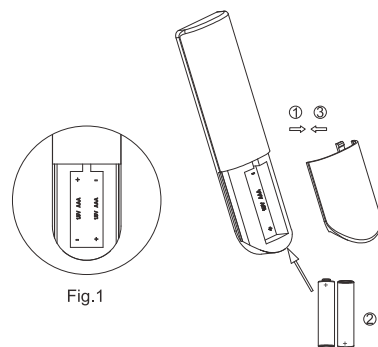 


Fig.1

 1. Remove the transmitter battery back cover.
2. Install two AAA batteries, fig 1.
3. Install the battery rear cover.

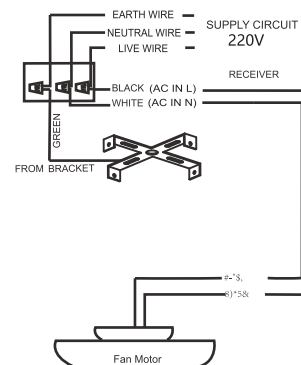

 3. As shown in the figure, connect the fan to the L/N wire of the external power supply with the wiring nut, and connect the ground wire of the bracket to the external wire.

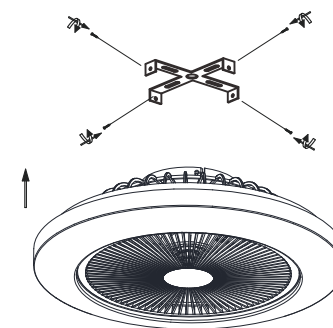

4. As shown in the figure, push the fan upwards to the bracket and fix it in place with the removed screws.