



1

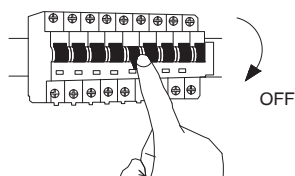

Turn off the general switch

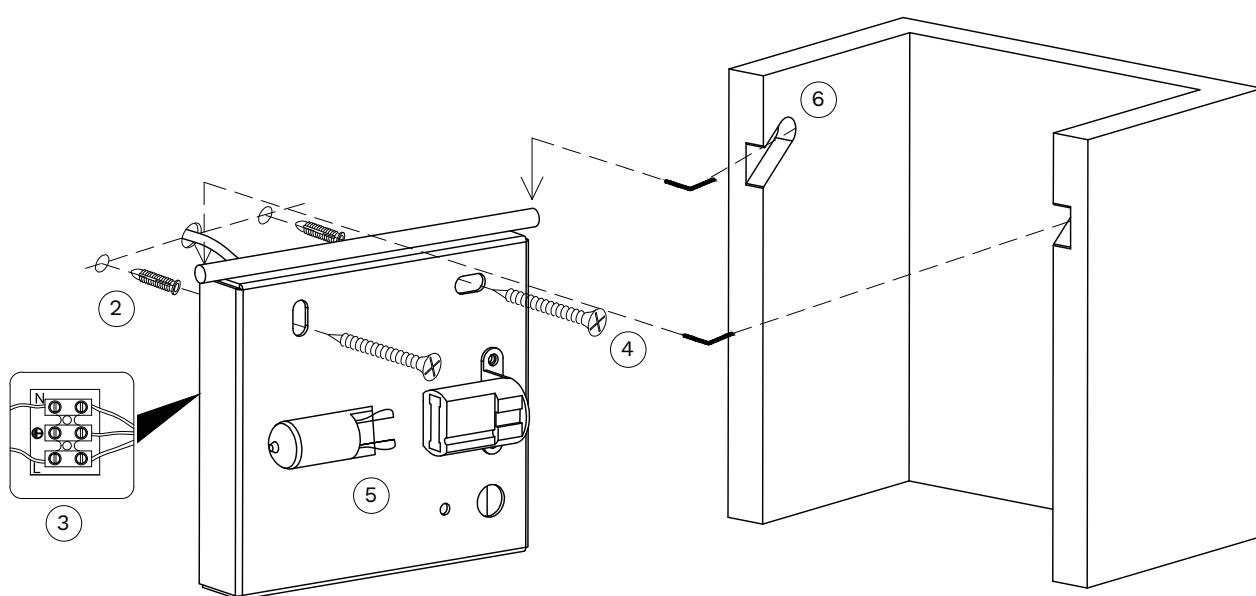

2. Align, mark & drill holes & apply plastic anchors


3. Connect wires

4. Place the nuts & tie up screws

5. Connect the driver

6. Fix it in place by clicking it into the recess

7

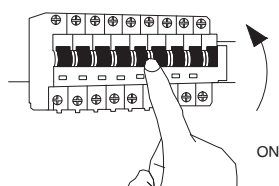

Turn on the general Switch

