



NOVA LUCE


6167201, 6167202, 6167207

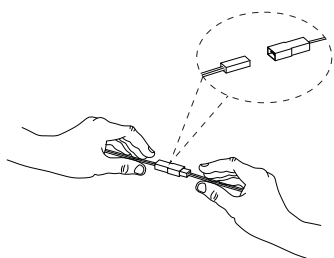


1. Unplug the wires

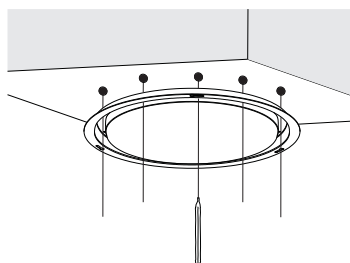


2. Mark where to drill holes

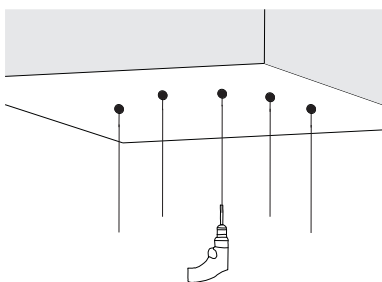


3. Drill on the marked areas

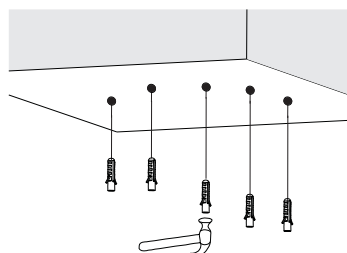


4. Apply plastic anchors

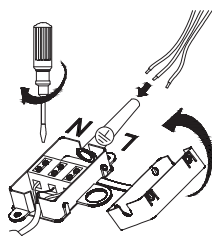


5. Connect the wires

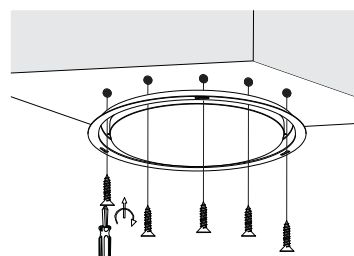

6. Apply the screws

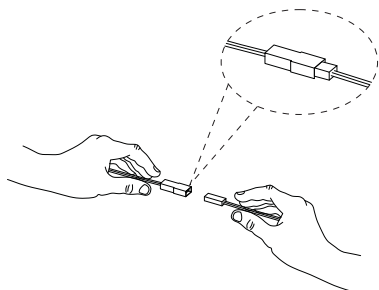

7. Plug the wires

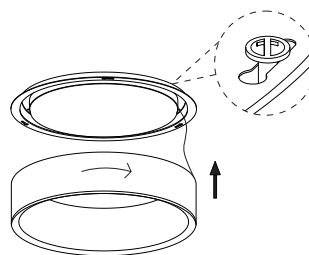

8. By rotating apply the product

