
NOVA LUCE


6167208

1

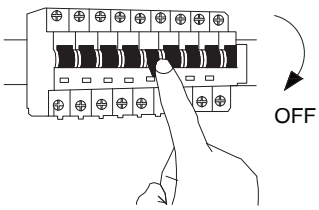


Turn off the general switch

2

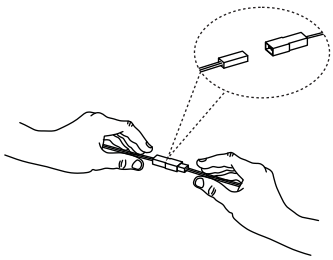


Unplug the wires

3

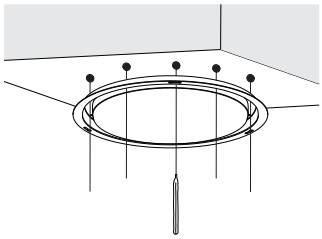


Mark where to drill holes

4

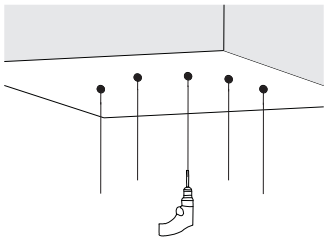


Drill on the marked areas

5

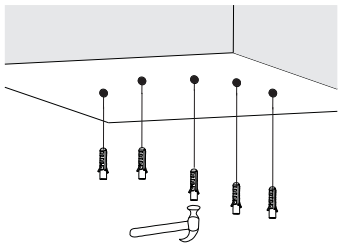


Apply plastic anchors

6

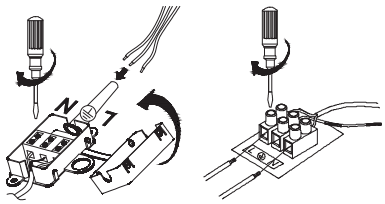


Connect the wires

7

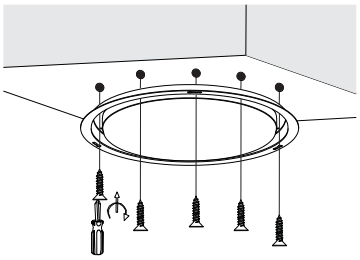


Apply the screws

8

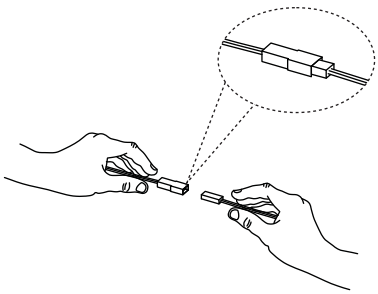


Plug the wires

9

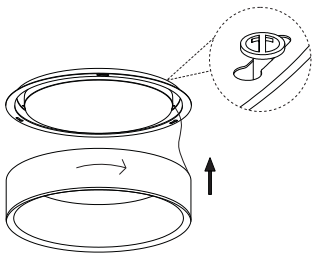

By rotating apply the product

10

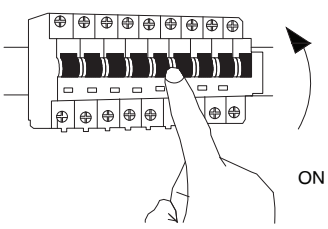

Turn ov the general switch

www.novaluce.com