NOVA LUCE

6167240

1

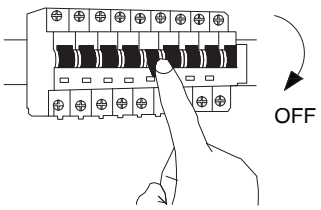

Turn off the general switch

2

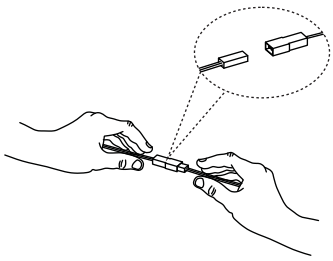

Unplug the wires

3

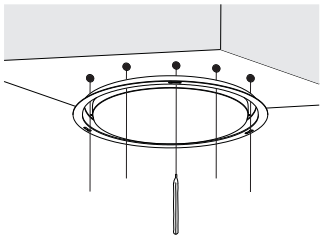

Mark where to drill holes

4

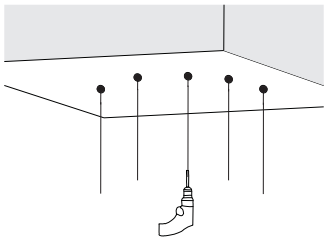

Drill on the marked areas

5

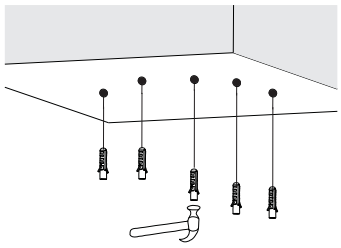

Apply plastic anchors

6

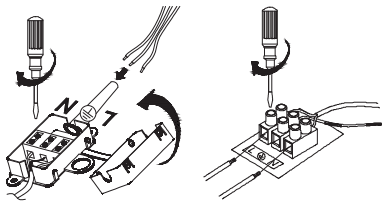

Connect the wires

7

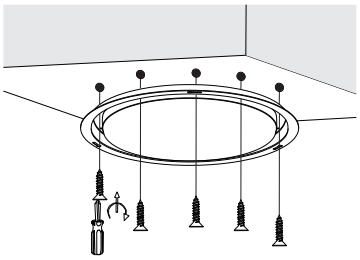

Apply the screws

8

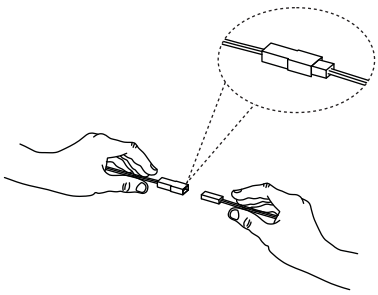

Plug the wires

9

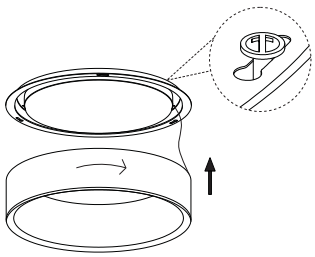

By rotating apply the product

10

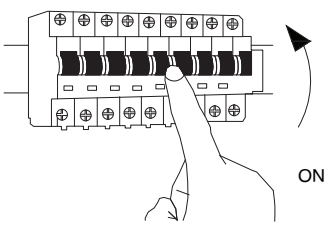

Turn ov the general switch

www.novaluce.com