

NOVA LUCE


6302361

1

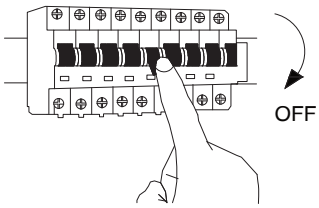


Turn off the general switch

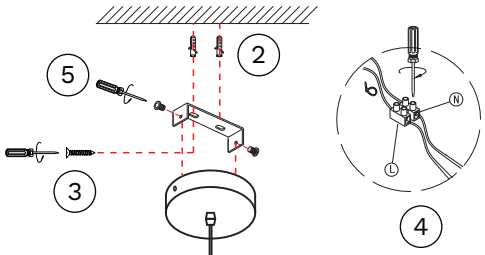

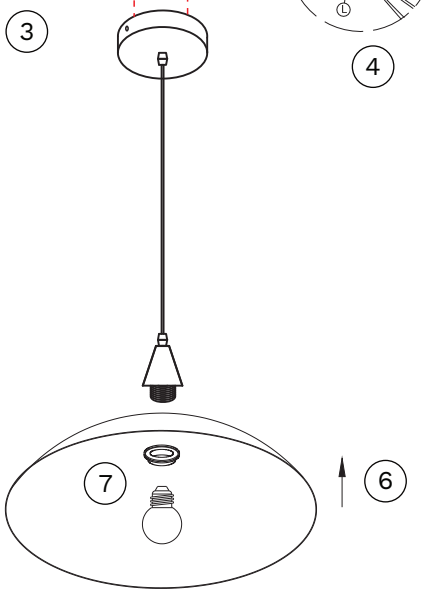

2. Align, mark & drill holes & apply plastic anchors
3. Tie up screws
4. Connect wires
5. Place the canopy into place & tie up side screws
6. Apply the cap by rotate
7. Insert the ring & the bulb by rotate

8

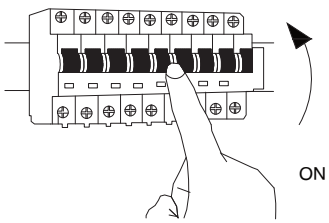

Turn on the general switch