


NOVA LUCE


720403, 720404

1

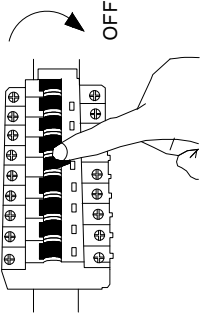


Turn off the general switch

2

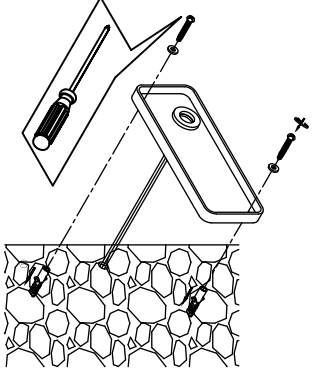


Mark, drill holes,
apply plastic anchors
& tie up screws

3

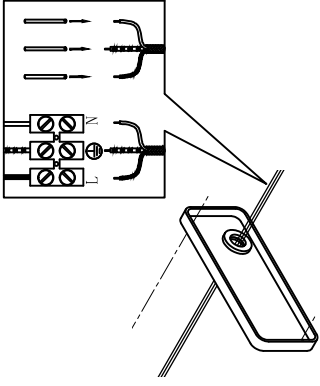


Connect wires

4

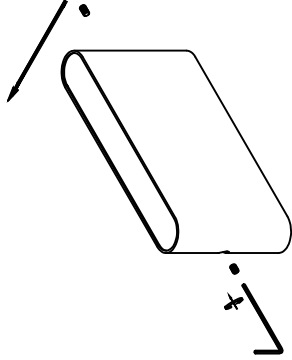

Apply the cap into place
by tying up the side screws

5

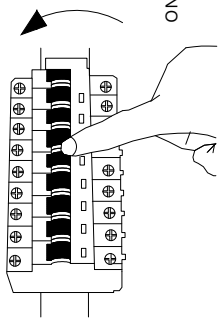

Turn on the general switch

6

