Example of corner installation

8252015

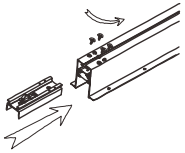

Insert mechanical connector & tie up screws

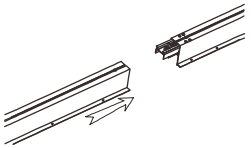

Click them together

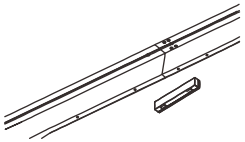

Connect electrical connector

8252011/ 8252013

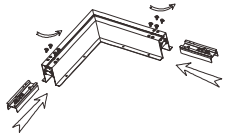

Insert mechanical connectors & tie up screws

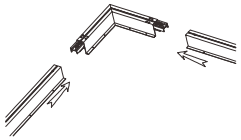

Click them together

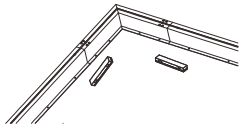

Connect electrical connectors

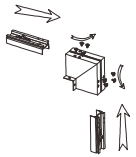

Assemble parts together by applying screws

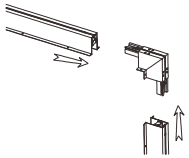

Click them together

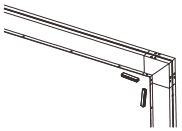

Connect electrical connectors

8252025

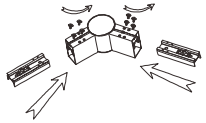

Assemble parts together by applying screws



Click them together



Connect electrical connectors

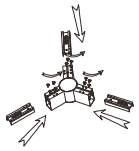

Assemble parts together by applying screws

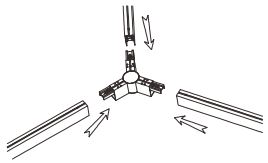

Click them together

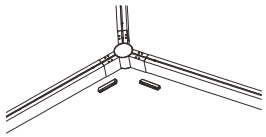

Connect electrical connectors

NOVA LUCE

INSTALL

8252029 / 8925220 / 8252009 / 8252039
8252008 / 9012673 / 9136161 / 9136160

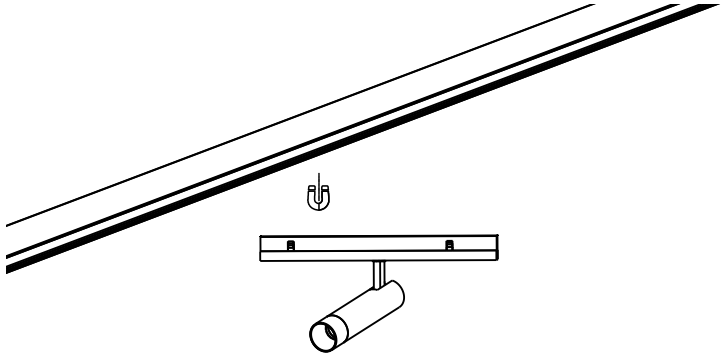

Example of recessed installation

8252002 / 9252005



Step:1

Create a CutOut

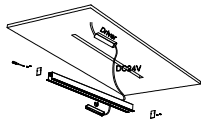

Step:2

Assemble parts by tying up screws
Click the connector on the track



Step:3

Tie up screws

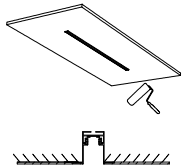

Step:4

Apply a sealer

Example of surface installation

8252001 / 8254411

Step:1

Assemble parts by tying up screws

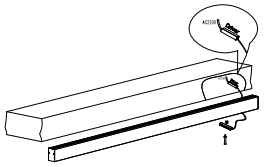

Step:2

Connect wires & click on the connector

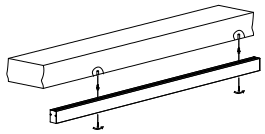

Step:3

Tie up screws

NOVA LUCE

Example of hanging installation

8252001 / 8252017

Step:1

Assemble parts by preparing screws



Step:2

Tie up screws



Step:3

Assemble parts by rotate

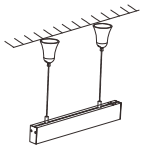

Step:4

Fix it on place

Example of surface installation

8252037 / 80252038

Step:1

Assemble parts together



Step:2

Connect wires

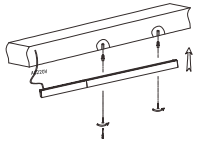

Step:3

Tie up screws to make it stable

Example of hanging installation

8925201



Step:1

Create a CutOut



Step:2

Apply plastic anchors



Step:3

Tie up screws to install parts

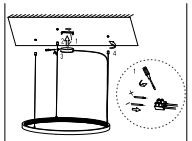

Step:4

Connect wires & tie up screws

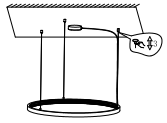

Step:5

Fix it in place & adjust desirable hight

Example of hanging installation



Step:1

Create a CutOut



Step:2

Apply plastic anchors



Step:3

Tie up screws to install parts

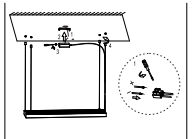

Step:4

Connect wires & tie up screws

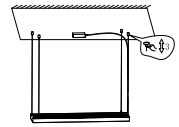

Step:5

Fix it in place & adjust desirable hight

Example of recessed installation



Step:1

Create a CutOut

Step:2

Make holes



Step:3

Apply plastic anchors



Step:4

Tie up screws to install parts

Step:5

Connect wires



Step:6

Apply a sealer



Step:7

Tie up screws to make it stable

Example of hanging installation



Step:1

Make holes



Step:2

Apply plastic anchors

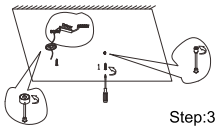

Step:3

Tie up screws



Step:4

Tie up screws to install parts



Step:5

Connect wires

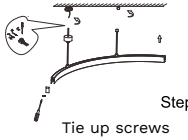

Step:6

Tie up screws to make it stable

Example of recessed installation

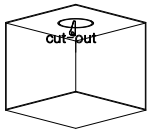

Step:1

Create a CutOut

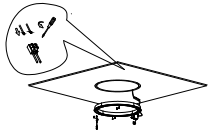

Step:2

Connect wires

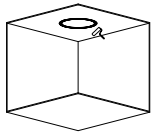

Step:3

Apply a sealer



Step:4

Apply the final layer to complete the installation



Step:5

Insert the part into place



Step:6

Apply screws



Step:7
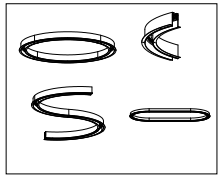
Click the connector on the track