


# NOVA LUCE

INSTALL


8254416 / 8254412 / 9136156

## Example of corner installation


**8252015**

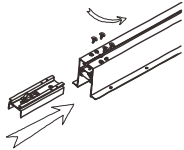

Insert mechanical connector  
& tie up screws

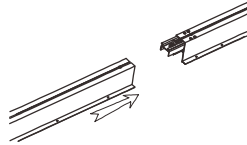


Click them together

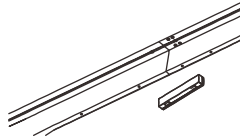


Connect electrical connector


**8252011/ 8252013**

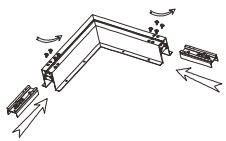


Insert mechanical connectors  
& tie up screws

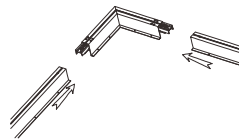


Click them together

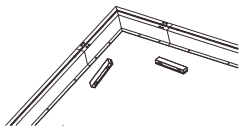


Connect electrical connectors

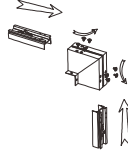

Assemble parts together  
by applying screws

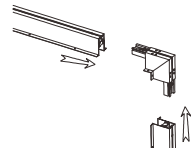


Click them together

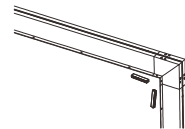


Connect electrical connectors


**8252025**

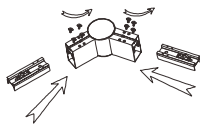


Assemble parts together  
by applying screws




Click them together




Connect electrical connectors

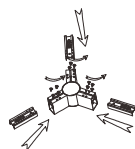

Assemble parts together  
by applying screws

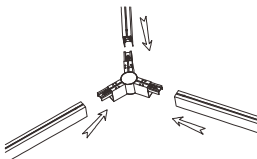

Click them together

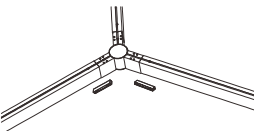


Connect electrical connectors

[www.novaluce.com](http://www.novaluce.com)


## Example of recessed installation

8252002 / 9252005




Step:1

Create a CutOut

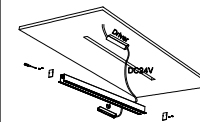


Step:2

Assemble parts  
by tying up screws  
Click the connector  
on the track

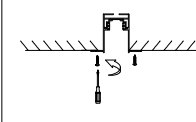

Step:3

Tie up screws

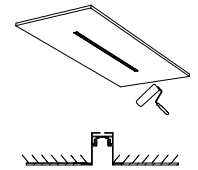

Step:4

Apply a sealer


## Example of surface installation

8252001 / 8254411




Step:1

Assemble parts by tying up screws

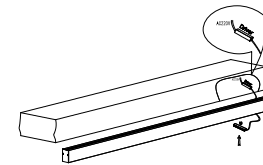

Step:2

Connect wires  
& click on the connector

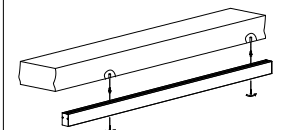

Step:3


Tie up screws

[www.novaluce.com](http://www.novaluce.com)

# NOVA LUCE


## Example of hanging installation

8252001 / 8252017

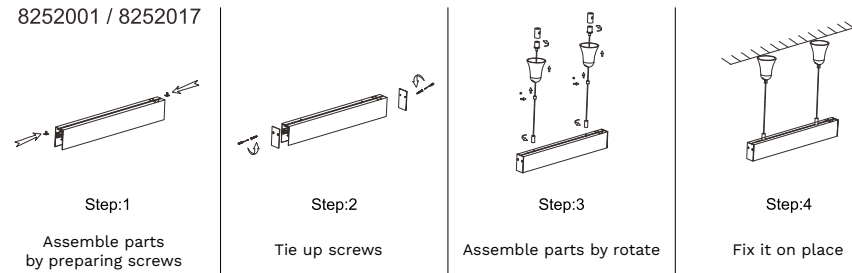


## Example of surface installation

8252037 / 8252038

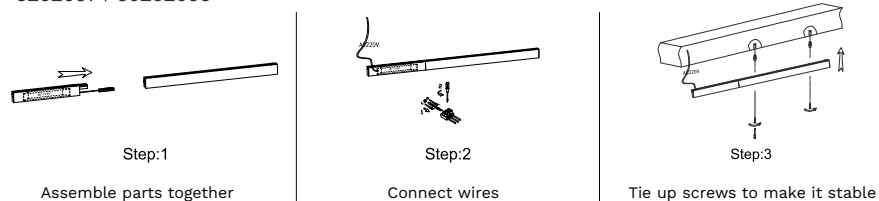


## Example of hanging installation


8925201

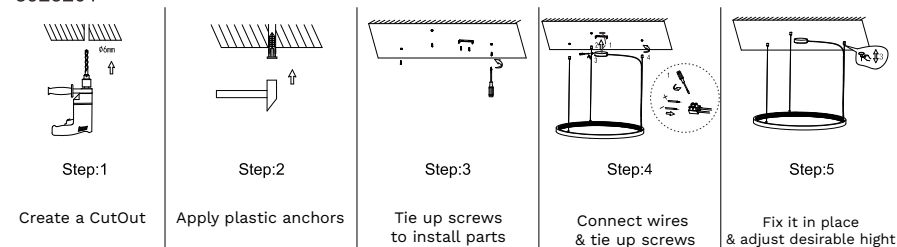


## Example of hanging installation

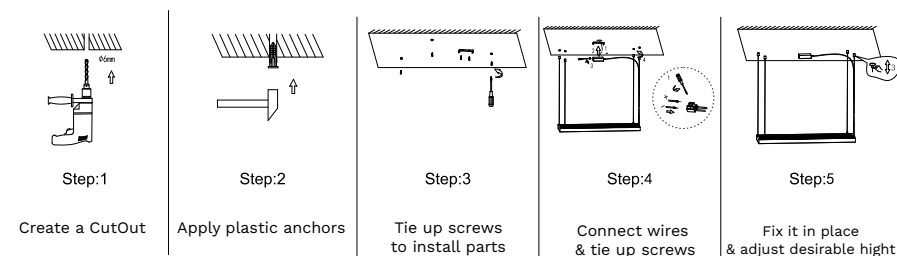

## Example of recessed installation

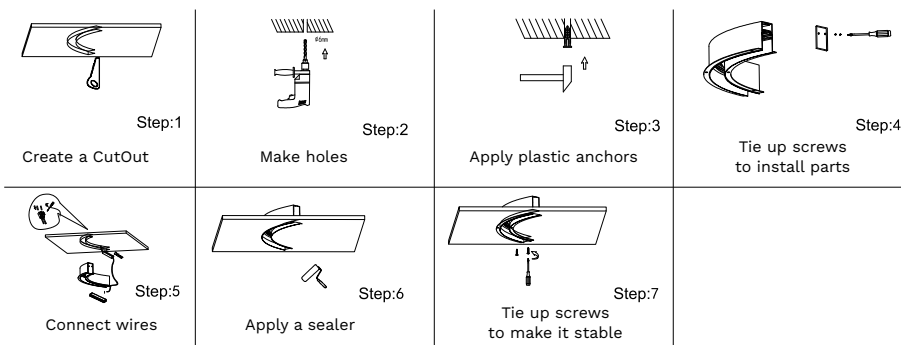

## Example of hanging installation

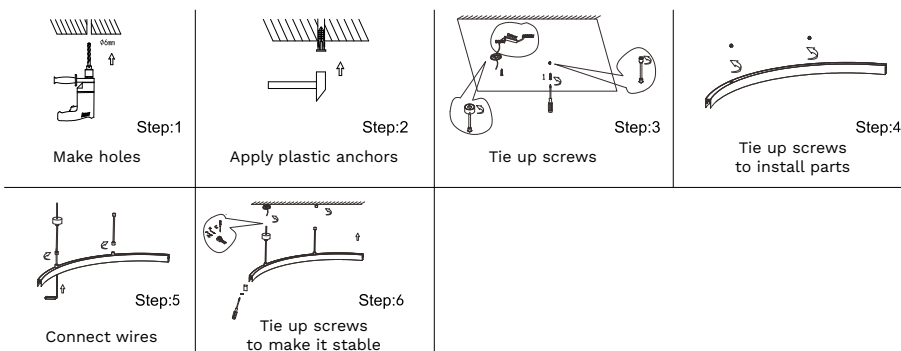

## Example of recessed installation

