
NOVA LUCE


866606

1

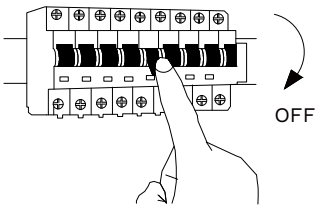


Turn off the general switch

2

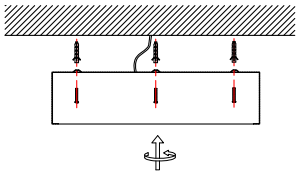


Drill holes & apply plastic anchors
With screws

3

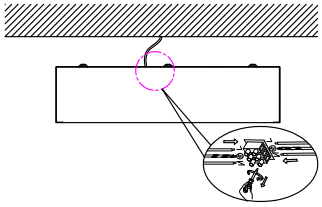


Connect the wires

4

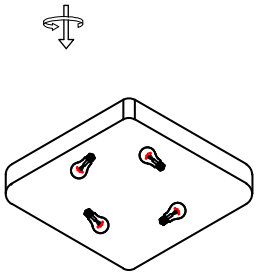


Apply the bulbs

5

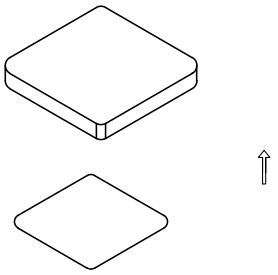


Apply the acrylic

6

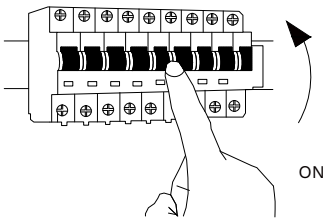

Turn on the general switch

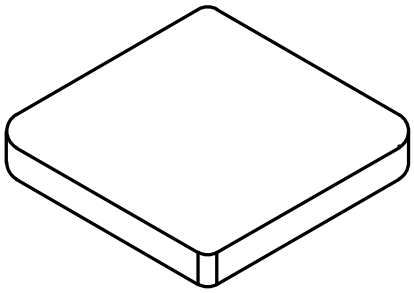

www.novaluce.com