


NOVA LUCE


9001094

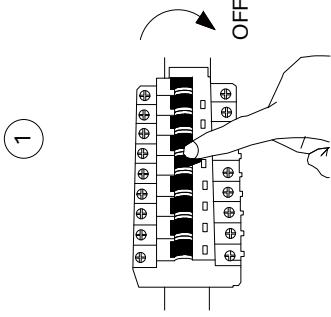

1


Turn off the general switch

2

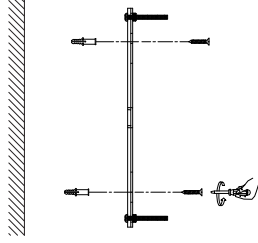


Mark, drill holes & apply
plastic anchors with screws

3

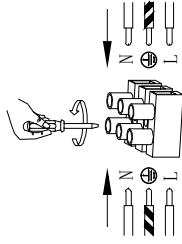


Connect the wires

4

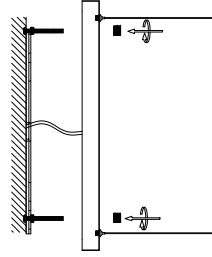

Apply the bottom caps

5

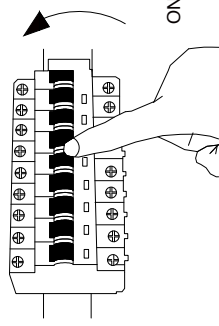

Turn on the general switch

