


NOVA LUCE


9002601

1

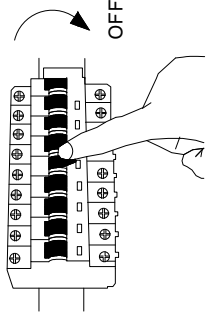


Turn off the general switch

2

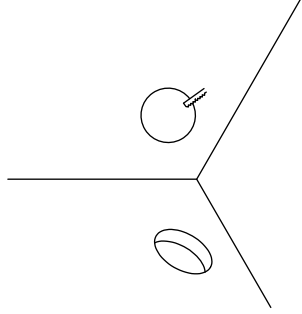


Create a CutOut

3

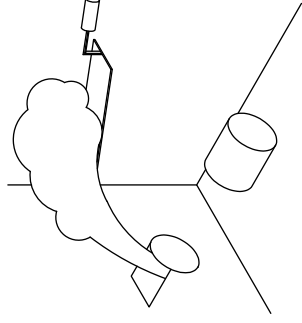


Apply a sealer
to insert the cylinder into the hole

4

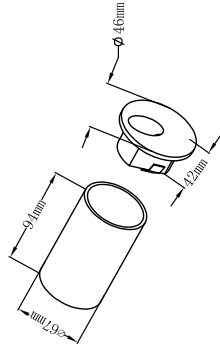


Sizes Map

5

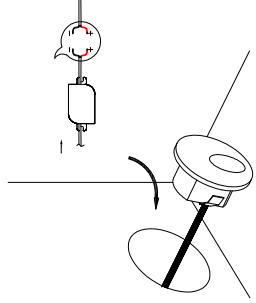

Connect wires
& insert the luminaire
into the stable box

6

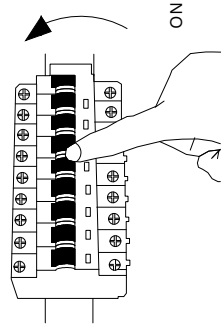

Turn on the general switch

