NOVA LUCE

9009164

1

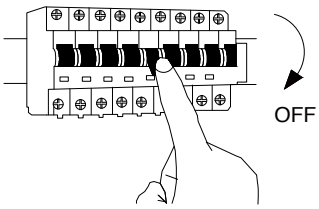

Turn off the general switch

2

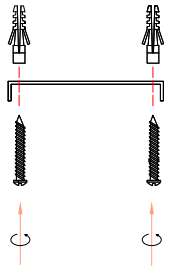

Drill holes & apply plastic anchors
With screws

3

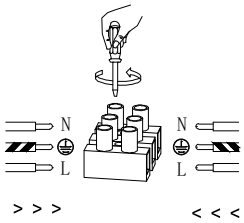

Connect the wires

4

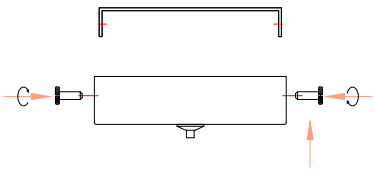

Apply the side screws

5

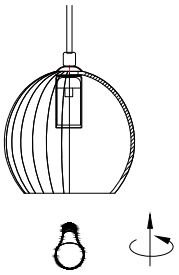

Instal Bulb

6

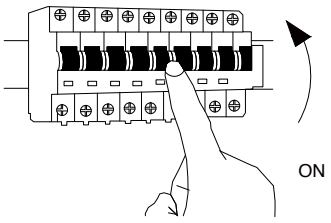

Turn on the general switch

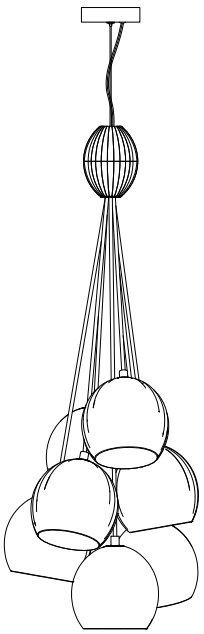

www.novaluce.com