
NOVA LUCE


9009341

1

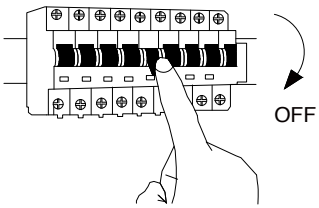


Turn off the general switch

2

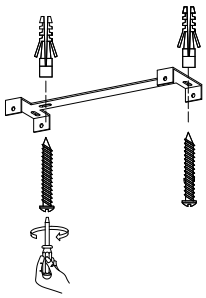


Drill holes & apply plastic anchors
With screws

3

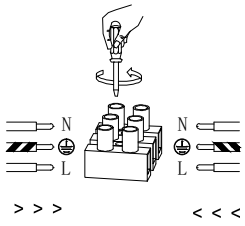


Connect the wires

4




Apply the side screws

5




Apply the glass in to place

6

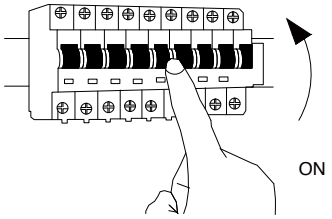

Turn on the general switch

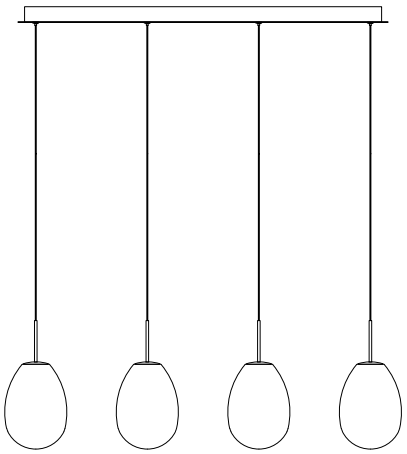



www.novaluce.com