



1

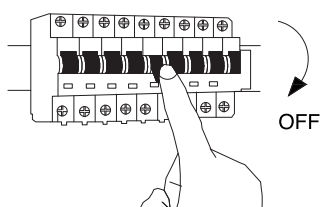


Turn off the general switch

2

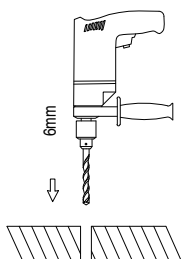


Drill holes

3

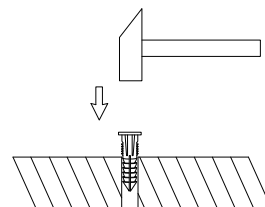


Apply plastic anchors

4

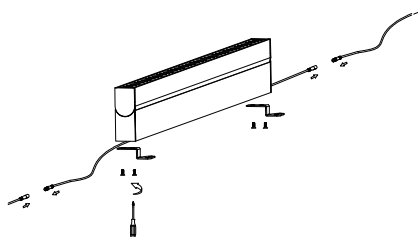


Apply screws & plug the wires

5

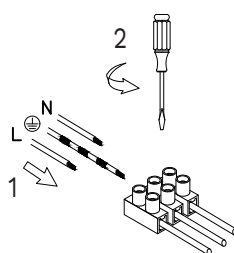


connect the wires

6

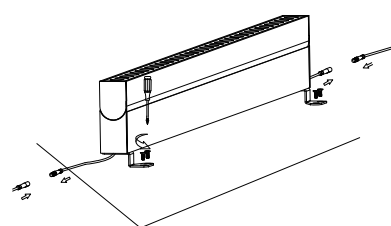


Apply the screws

7

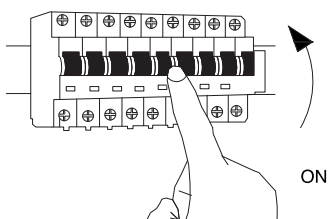


Turn on the general switch

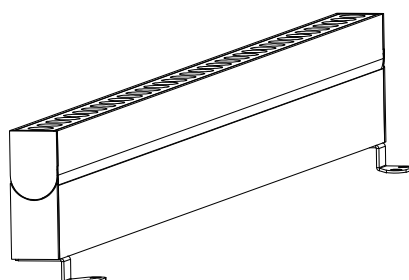

NOVA LUCE


9011161
For Wall

1

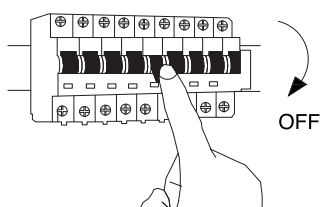


Turn off the general switch

2

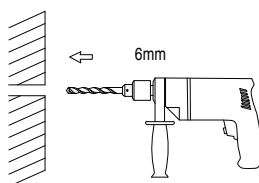


Drill holes

3

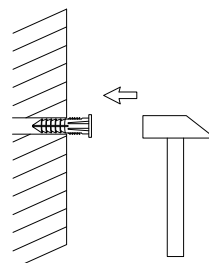


Apply plastic anchors

4

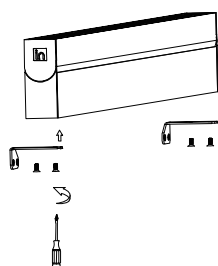


Apply screws & plug the wires

5

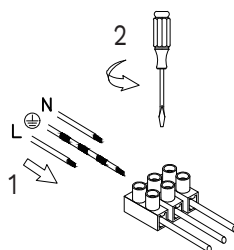


connect the wires

6

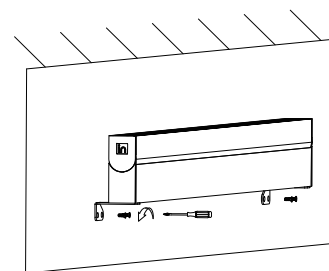

Apply the screws

7

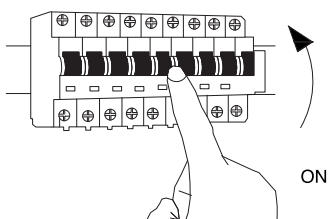

Turn on the general switch

