Example of surface installation

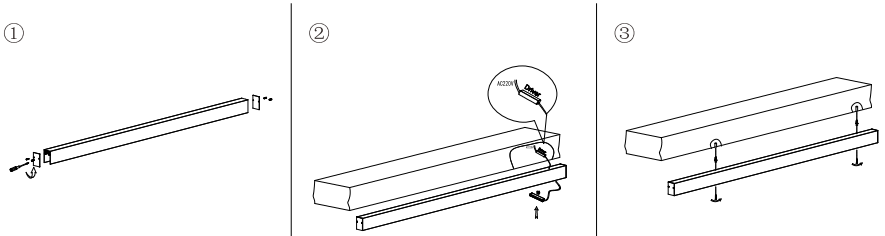

Tie up screws to assemble parts

Connect wires
& insert the electrical connector

Tie up screws to make it stable

Example of corner installation

9136303 / 9110022
9136290

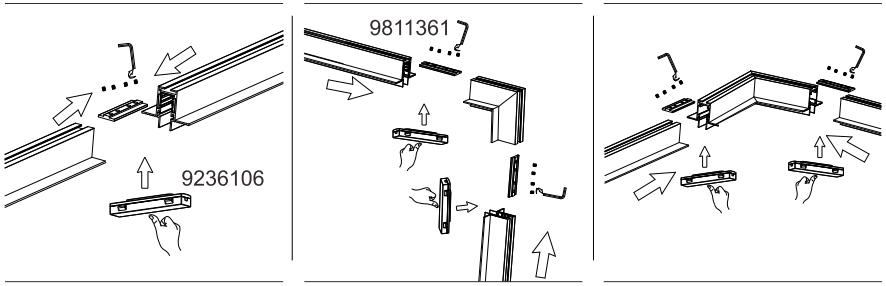

Tie up the screws
& insert the connectors

NOVA LUCE

INSTALL 9013620 / 9136136 / 9013720 / 9136142

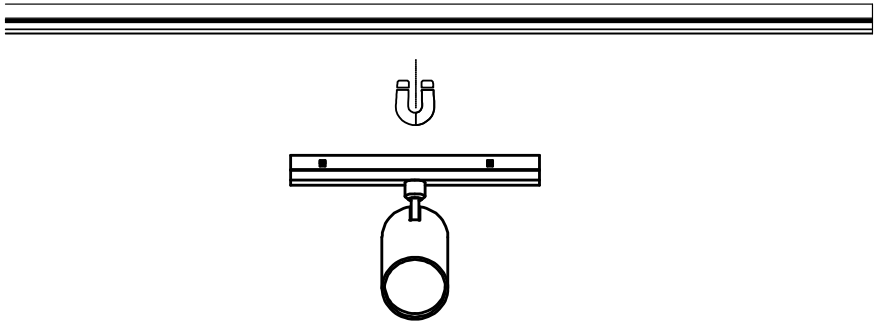

Example of Recessed installation

9999101

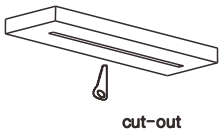

Step:1

Create a CutOut

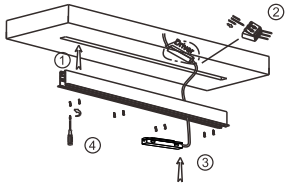

Step:2

Tie up parts into place
& connect wires
& the electrical connector

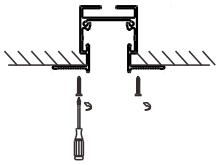

Step:3

Tie up screws



Step:4

Apply a sealer



Step: 5

Complete the installation
fixing the final layer

NOVA LUCE

Example of recessed installation

9136335 / 9136100

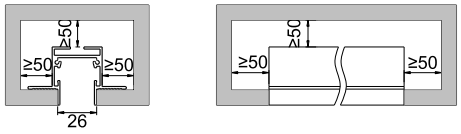

①  Create a CutOut	②  Connect wires	③  Fix it in place
④  Tie up screws to tie up screws	⑤ 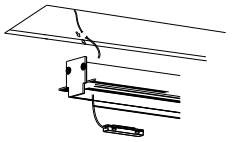 Connect the electrical connector	⑥ 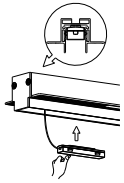 Insert it in place
⑦  Insert it in the CutOut	⑧ 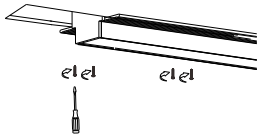 Tie up screws to make it stable	⑨  Complete the installation
⑩ 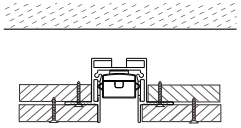 Tie up screws to make it stable	⑪ 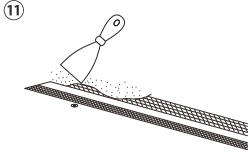 Apply a sealer	⑫ 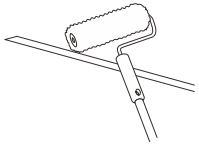 Apply paint

Example of hanging installation

9136338 / 9236107 / 9136101

① 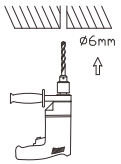 Make holes	② 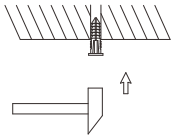 Apply plastic anchors	③ 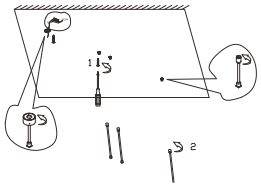 Fix parts into place by rotate
④ 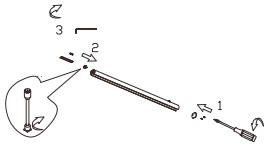 Tie up screws to assemble them	⑤ 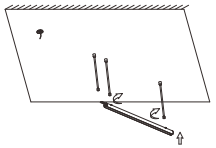 Connect the track by rotate	⑥  Assemble parts by applying screws
⑦ 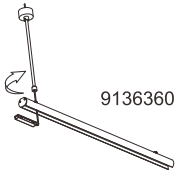 Insert the electrical connector into place	⑧ 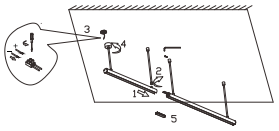 Connect wires & connect tracks together by rotate	⑨ 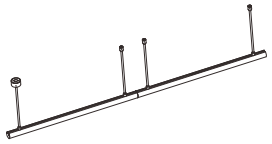 Complete the installation