



1

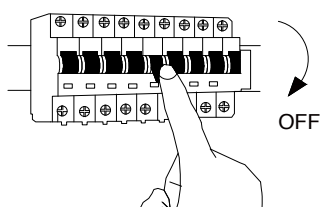


Turn off the general switch

2

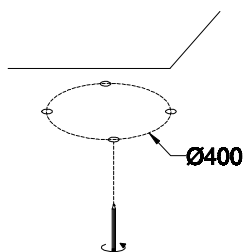


Mark where to drill

3

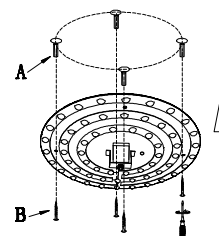


Drill holes & apply plastic anchors
With screws

4

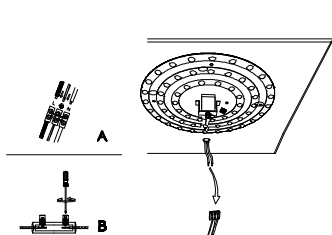


Connect the wires

5

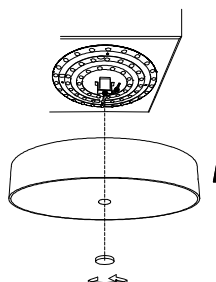

Apply the product in to place

6

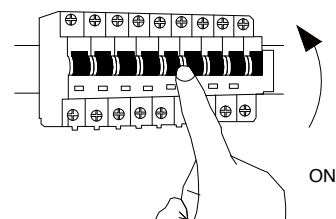

Turn on the general switch

