
NOVA LUCE


9019826

1

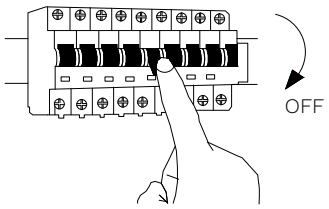


Turn off the general switch

2

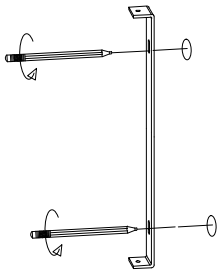


Mark & drill holes

3

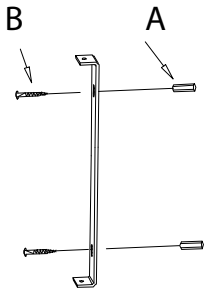


Apply plastic anchors with screws

4

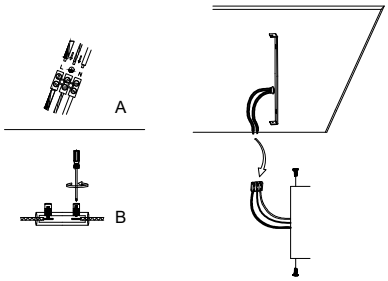


Connect the wires

5

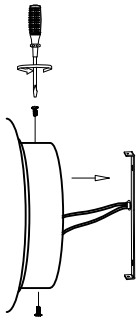


Apply the side screws

5

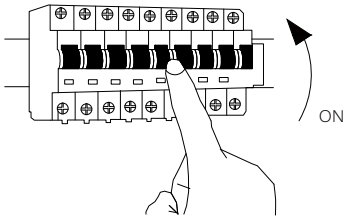

Turn on the general switch

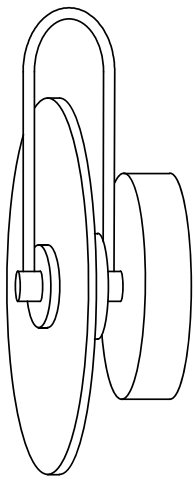

www.novaluce.com