
NOVA LUCE


9019870

1

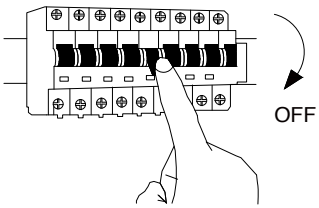


Turn off the general switch

2

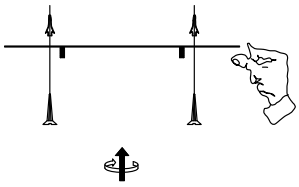


Drill holes & apply plastic anchors
With screws

3

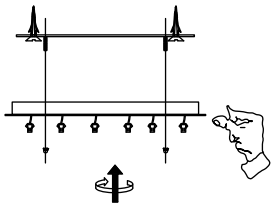


Connect the wires
& Apply the bottom nut

4




Adjust the wire

5

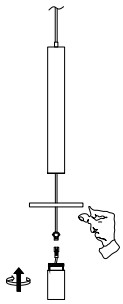


Apply the element in to place
& Connect the wire

6

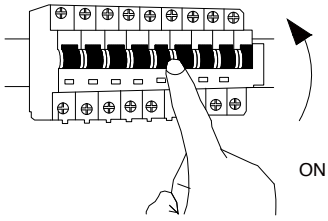

Turn on the general switch

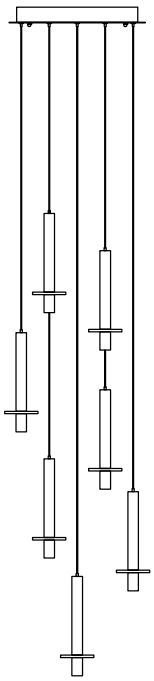

www.novaluce.com