


# NOVA LUCE


9026120

1

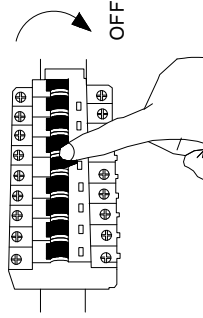


Turn off the general switch

2

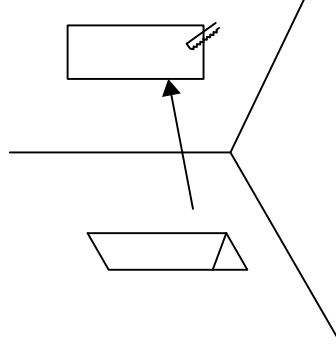


Create a CutOut

3

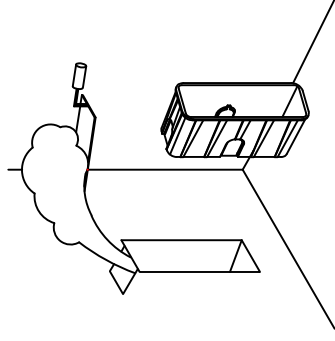


Apply a sealer  
to insert the box into the hole

4

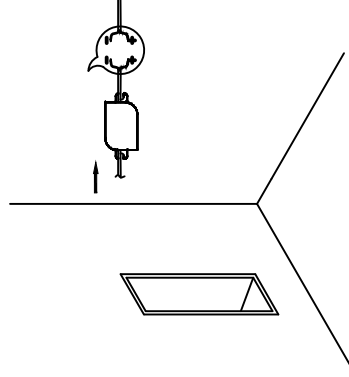


Connect wires

5

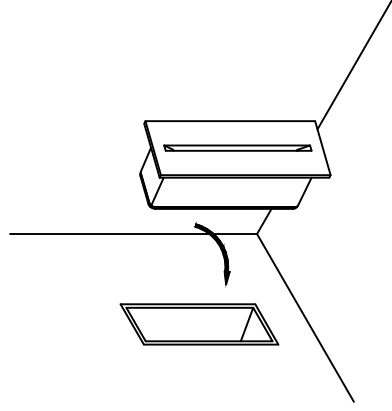

Insert the luminaire  
into the stable box

6

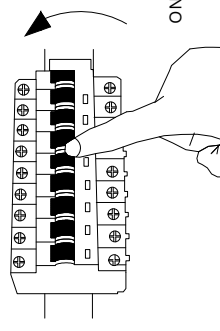

Turn on the general switch

7

