NOVA LUCE 9030100 9030101 9030102

1

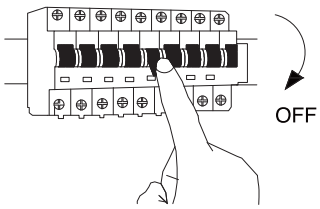

Turn off the general switch

2

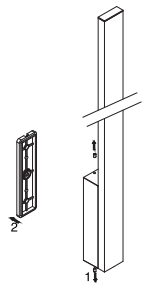

Dismental the product

3

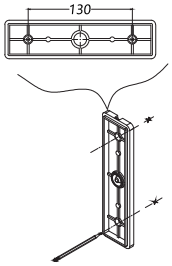

Mark where to drill

4

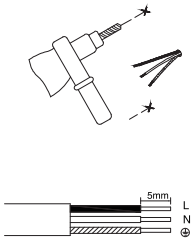

Make sure to have the
Cables in the center

5

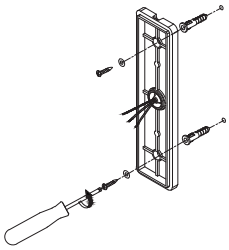

Drill holes apply plastic anchors
With screws

6

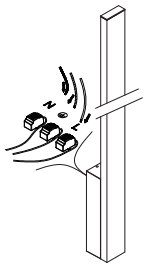

Connect wires

7

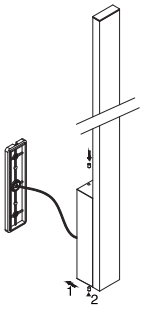

Put it in place & apply
The side nuts

8

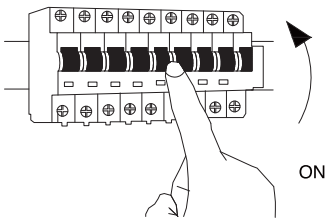

Turn on the general switch



www.novaluce.com