



1

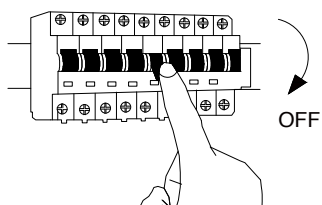


Turn off the general switch

2




Dismantle the product

3

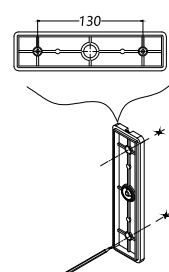


Mark where to drill

4

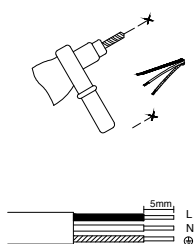


Make sure to have the
Cables in the center

5

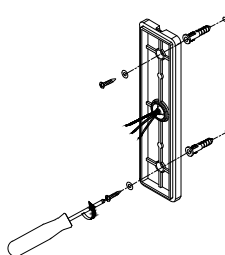


Drill holes apply plastic anchors
With screws

6

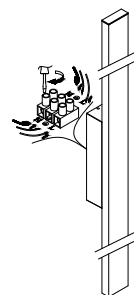


Connect wires

7

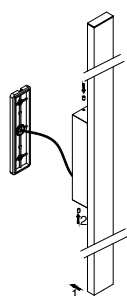

Put it in place & apply
The side nuts

8

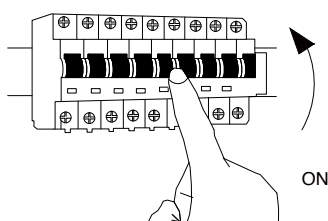

Turn on the general switch

