



NOVA LUCE

A
9030125 9030126




1

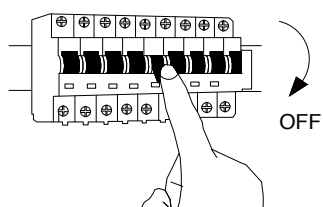


Turn off the general switch

2

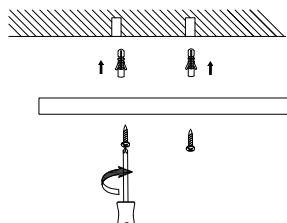


Drill holes & apply plastic anchors
With screws

3

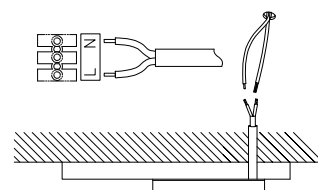


Connect the wires

4

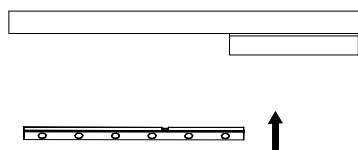

Apply the side screws

5

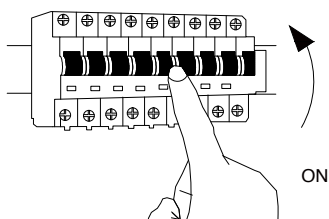


Turn on the general switch




NOVA LUCE

B
9030125 9030126




①

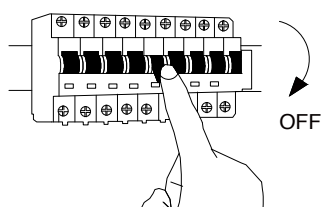


Turn off the general switch

②

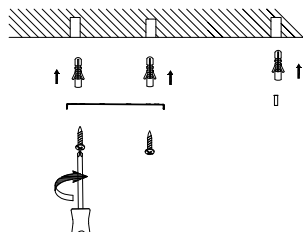


Drill holes & apply plastic anchors
With screws

③

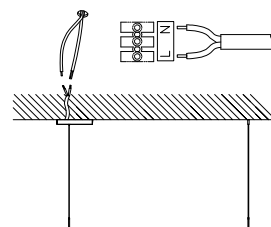


Connect the wires

④

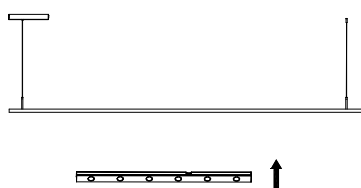

Put it in place

⑤

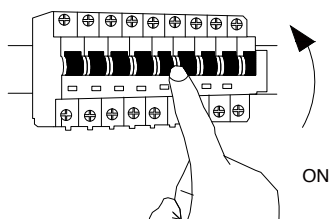


Turn on the general switch




NOVA LUCE

C
9030125 9030126




1

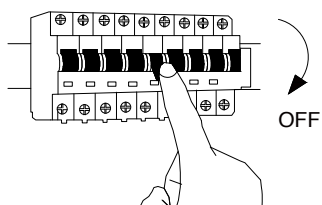


Turn off the general switch

2

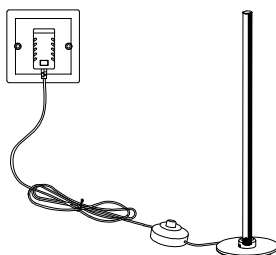


Plug it in

3

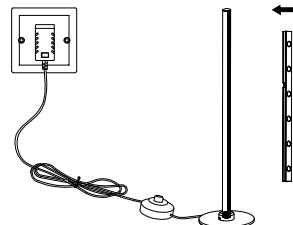

Put it in place

4

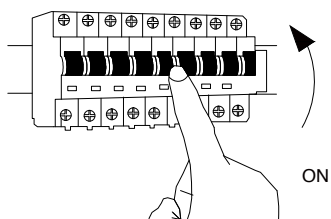

Turn on the general switch

