



NOVA LUCE

A
9030127 9030128




1

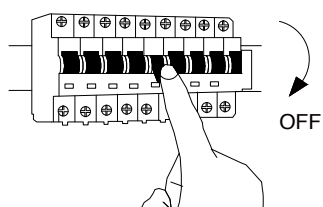


Turn off the general switch

2

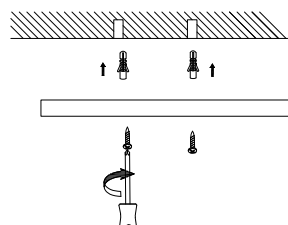


Drill holes & apply plastic anchors
With screws

3

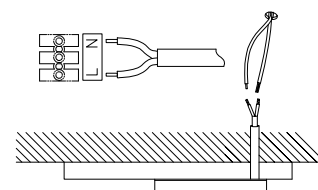


Connect the wires

4

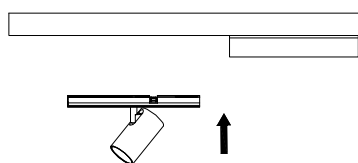


Apply the side screws

5

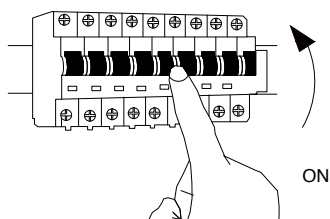


Turn on the general switch

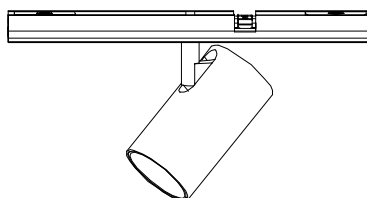


www.novaluce.com

NOVA LUCE

B
9030127 9030128




1

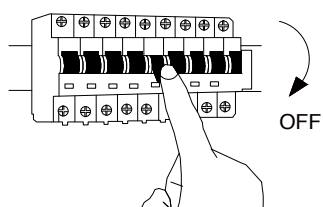


Turn off the general switch

2

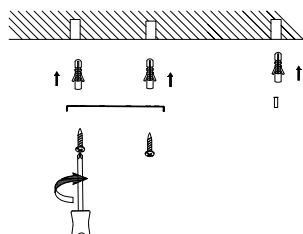


Drill holes & apply plastic anchors
With screws

3

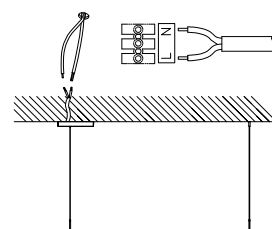


Connect the wires

4

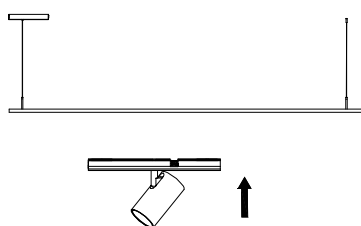


Put it in place

5

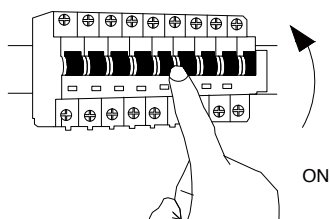


Turn on the general switch

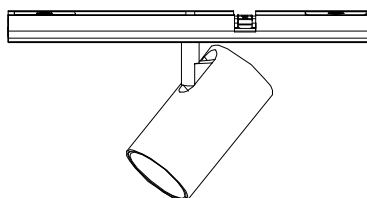


www.novaluce.com

NOVA LUCE

C
9030127 9030128




1

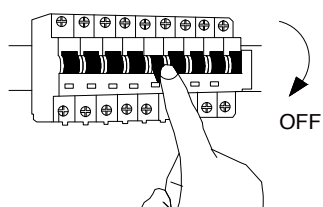


Turn off the general switch

2

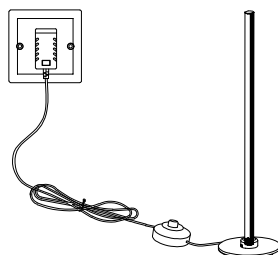


Plug it in

3

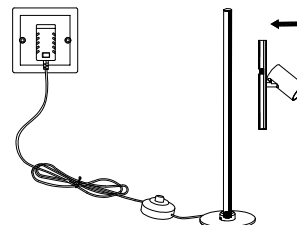


Put it in place

4

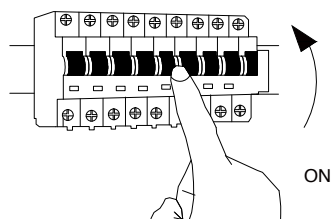

Turn on the general switch

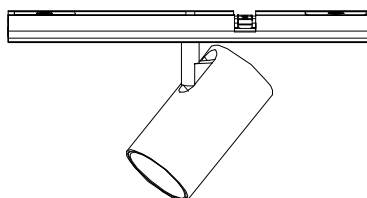

www.novaluce.com