



# NOVA LUCE

A  
9030129 9030130




1

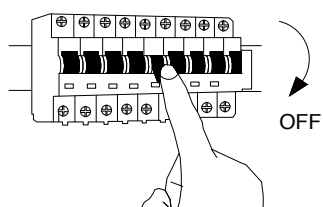


Turn off the general switch

2

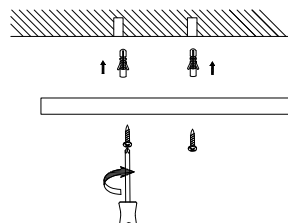


Drill holes & apply plastic anchors  
With screws

3

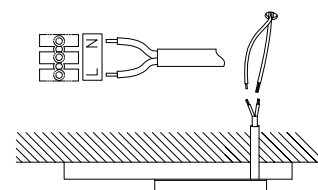


Connect the wires

4

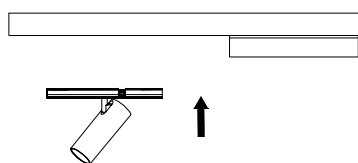


Apply the side screws

5

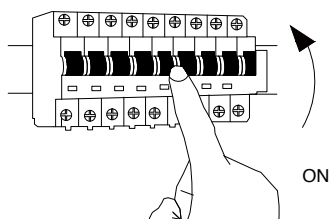


Turn on the general switch

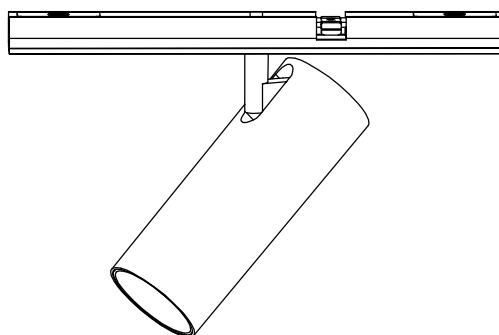


# NOVA LUCE

B  
9030129 9030130




1

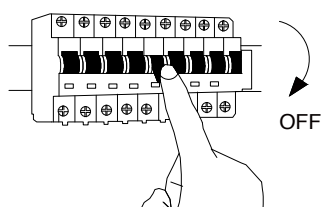


Turn off the general switch

2

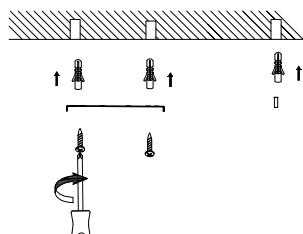


Drill holes & apply plastic anchors  
With screws

3

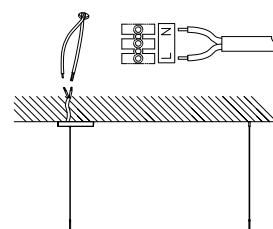


Connect the wires

4

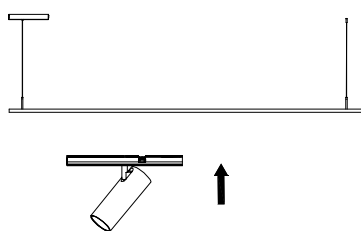


Put it in place

5

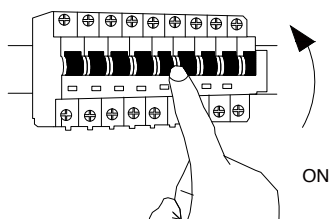


Turn on the general switch

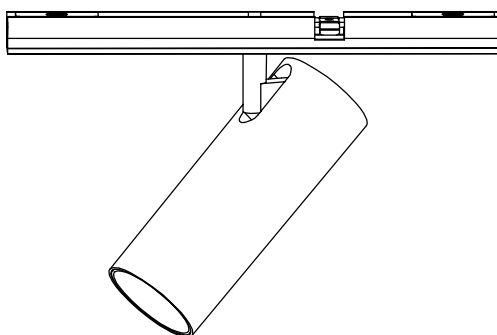


# NOVA LUCE

C  
9030129 9030130




1

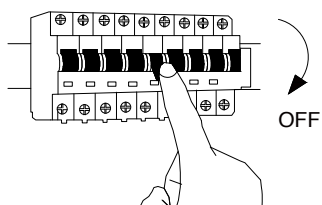


Turn off the general switch

2

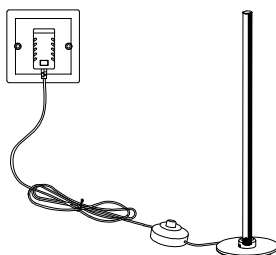


Plug it in

3

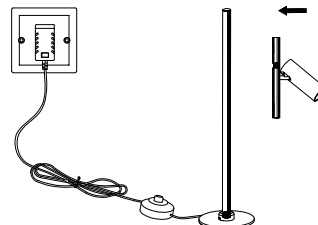

Put it in place

4

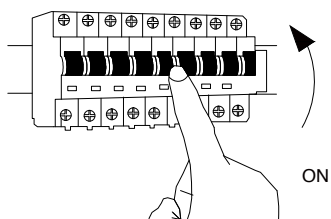

Turn on the general switch

