


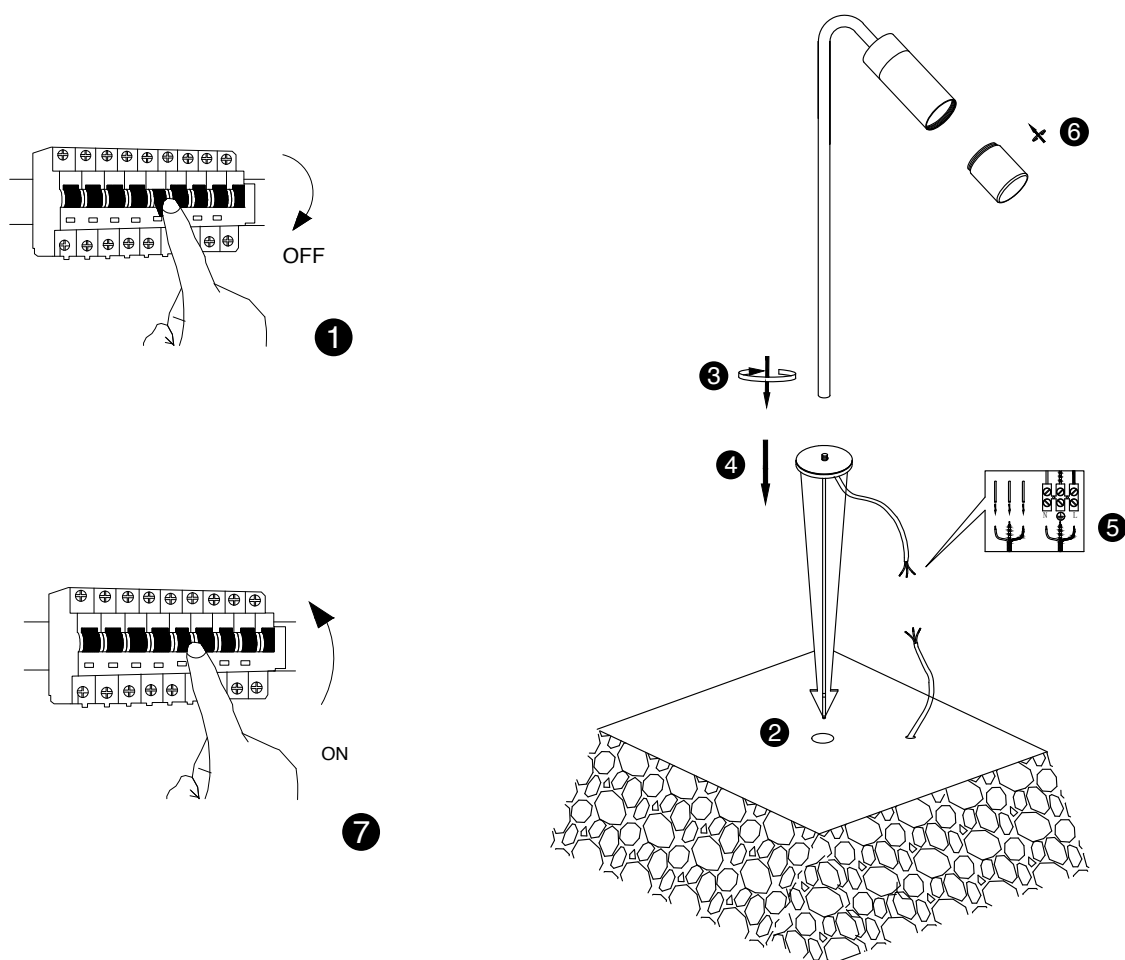

1. Turn off general switch
2. Drill a hole
3. By rotating place the pipe in place
4. Apply the spike
5. Connect the wires
6. Apply the element by rotating
7. Turn on the general switch

