



1

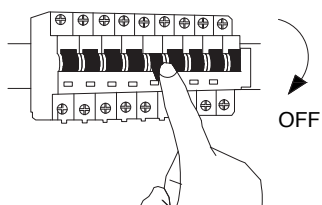


Turn off the general switch

2

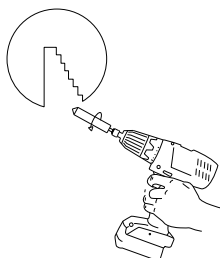

Make a cut out 3.5 cm


3

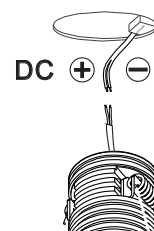

Connect the wires


The cable connection has to be waterproof
Below tow ways recommended. Accessories

4

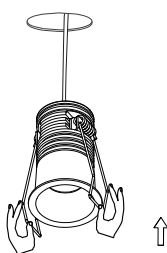

Apply the product in to place

5

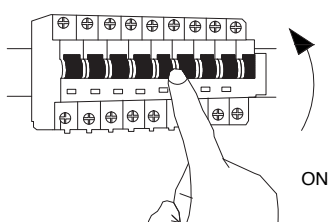

Turn on the general switch

