



1

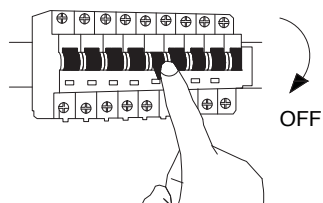


Turn off the general switch

2

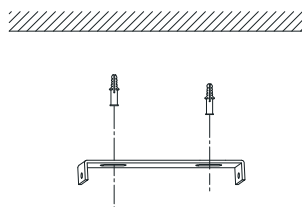

Mark & apply plastic anchors




3

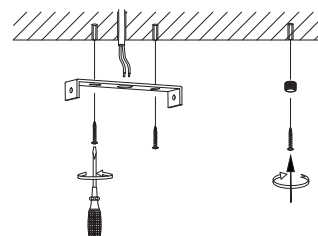

Apply screws


4

CCT switch in canopy




Choose the color temperature

5

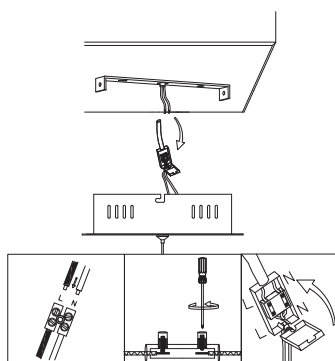


Connect the wires

6

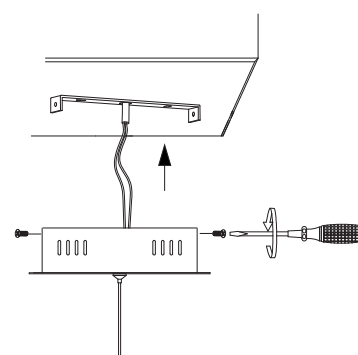


Apply the side screws

7

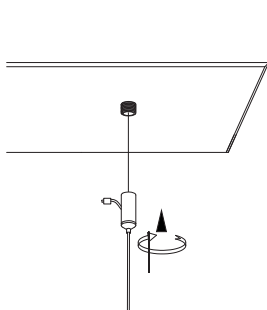

Apply the element in place

8

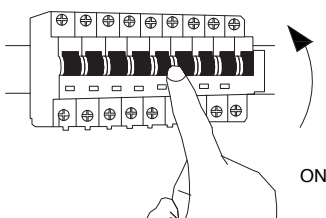

Turn on the general switch

