
NOVA LUCE


9040016

1

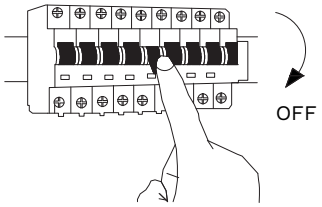


Turn off the general switch

2

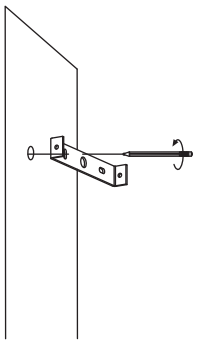


Mark where to drill holes

3

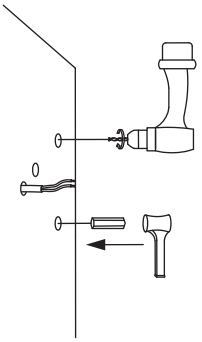


Make holes & apply anchors

4

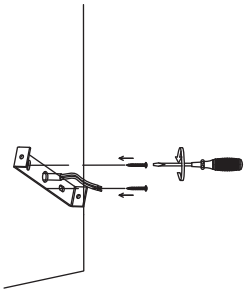


Apply the screws

5

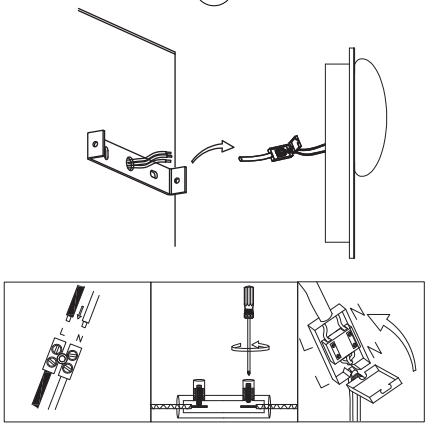


Connect wires

6

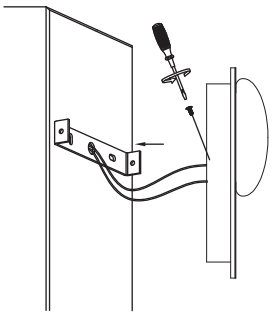


Put it in place
& Apply side screws

7

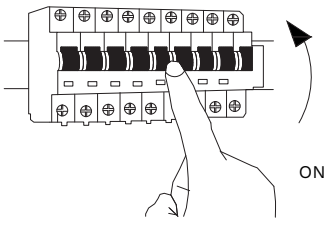

Turn on the general switch

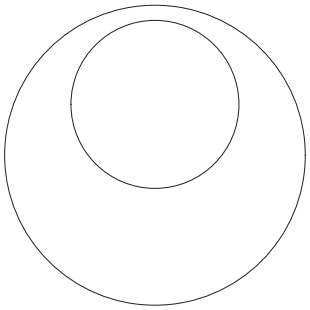

www.novaluce.com