
NOVA LUCE


9040024

1

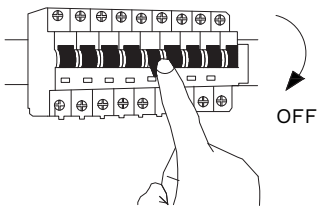


Turn off the general switch

2

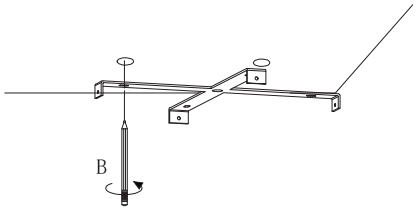


Mark where to drill holes

3

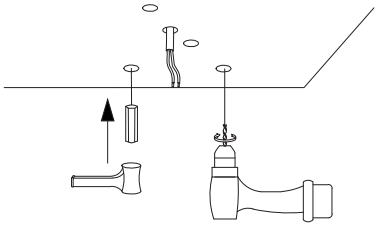


Make holes & apply anchors

4

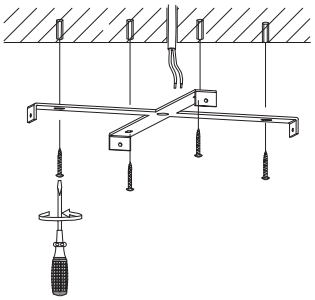


Apply screws

5

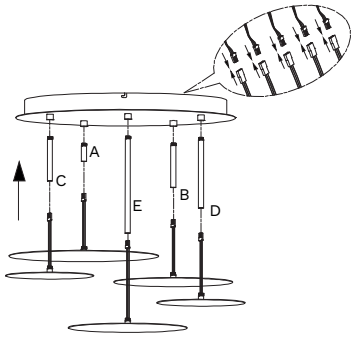


Apply the elements

6

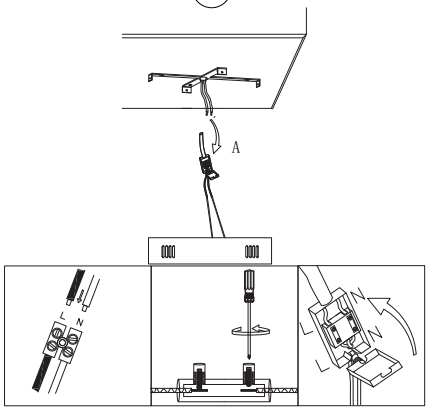


Connect the wires

7

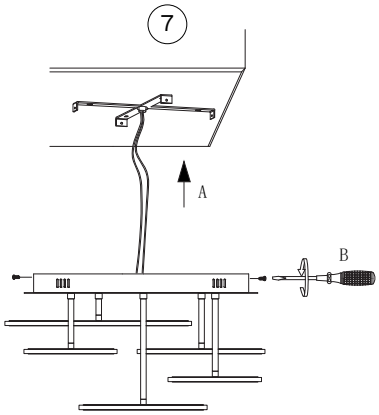


Apply the element in to place
& Apply the side screws

8

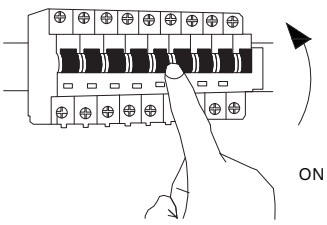

Turn on the general switch

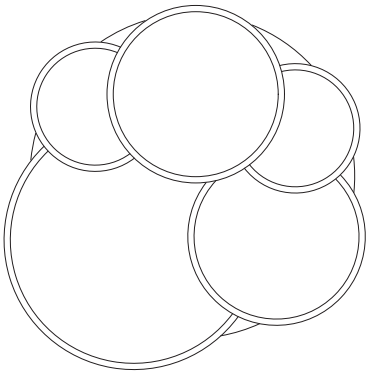

www.novaluce.com