
NOVA LUCE


9040039

1

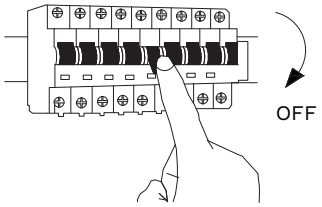


Turn off the general switch

2

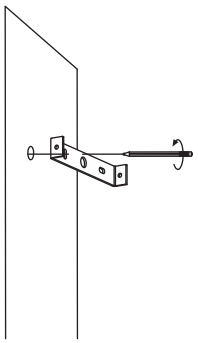


Mark where to drill holes

3

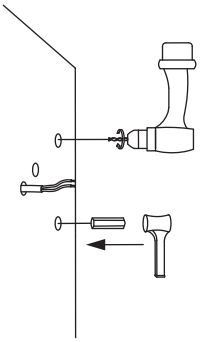


Make holes & apply anchors

4

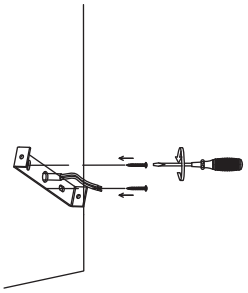


Apply screws

5

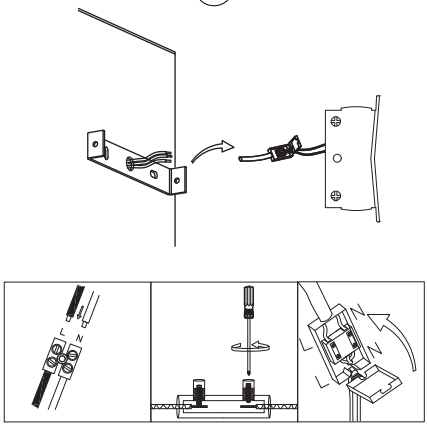


Connect wires

6

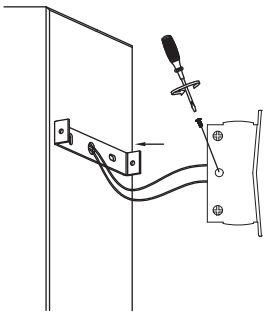


Apply side screws

7

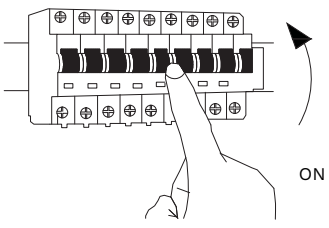

Turn on the general switch



www.novaluce.com