
NOVA LUCE


9040043

1

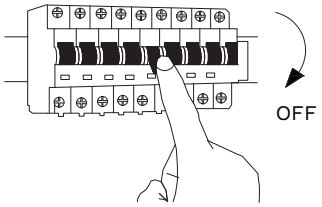


Turn off the general switch

2

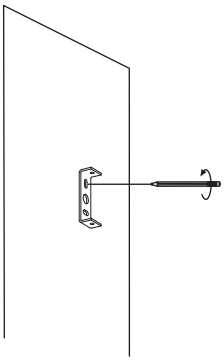


Mark where to drill holes

3

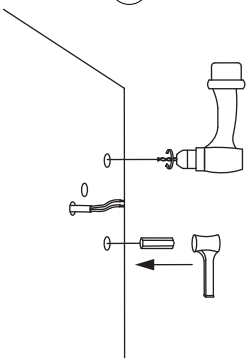


Make holes & apply anchors

4

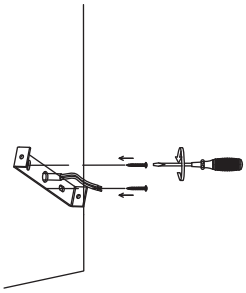


Apply screws

5

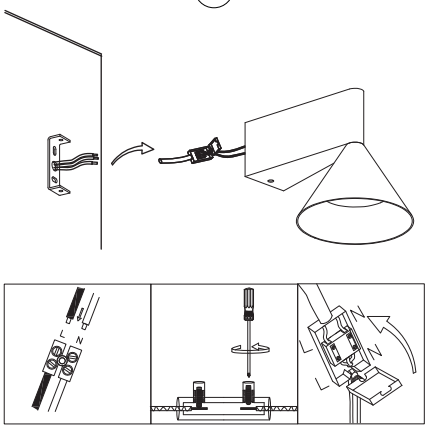


Connect wires

6

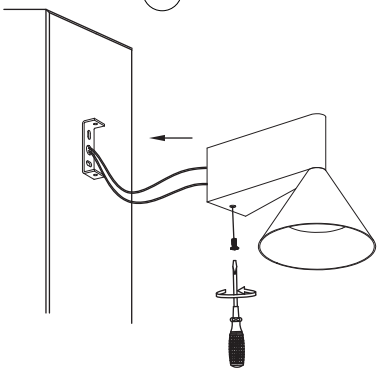

Put it in place
& Apply side screw

7

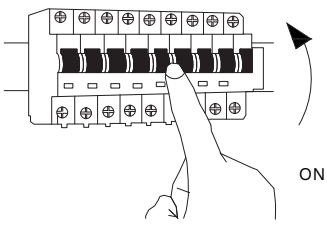

Turn on the general switch

