



1

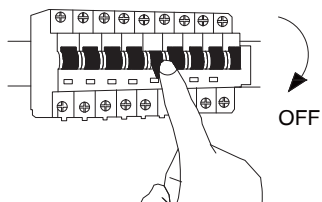

Turn off the general switch


2

Cut Size.
 $\Phi 35\text{mm}$




Create a CutOut

3

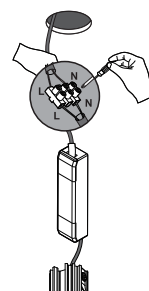


Connect wires

4

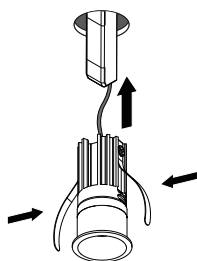

Press brackets &
Insert it into the hole

5

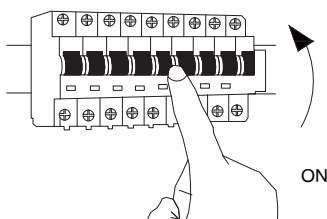

Turn on the general switch

6

