



1

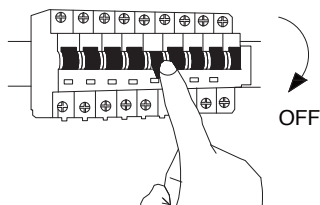


Turn off the general switch

2

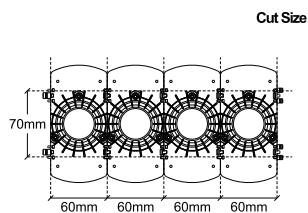


Create a CutOut

3

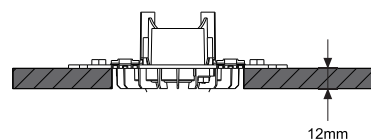


Adjust it

4

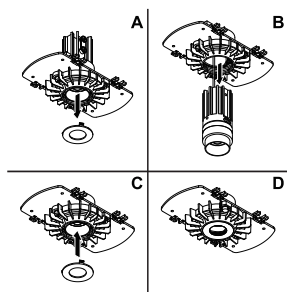


A. Remove the cap B. Dismantle the luminaire
C. Apply the cap D. Assemble parts

5

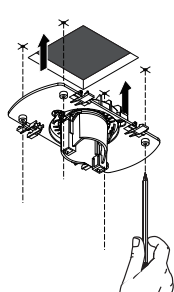


Mark where to drill holes

6

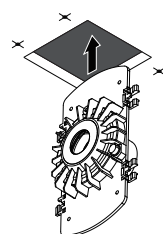


Insert the element

7

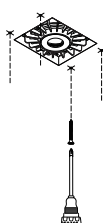


Apply screws

8

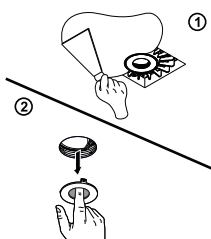


Apply putty powder & the element

9


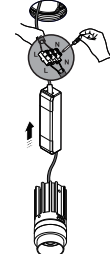


Connect wires
insert luminaire into place

10

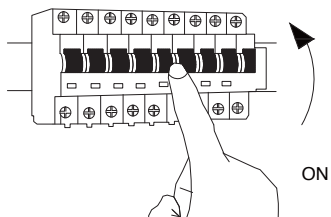

Turn on the general switch

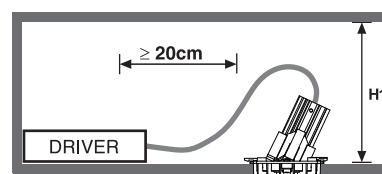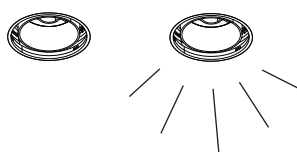

Code No.	Distance(H1)
9040111	> 80mm