



1

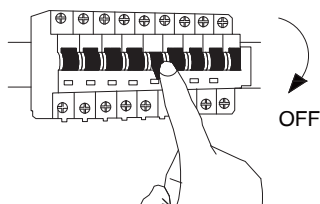

Turn off the general switch


2

Code No.	Cut Size.
9040112-9040113	Φ18mm
9040114-9040115	Φ35mm




Create a CutOut

3

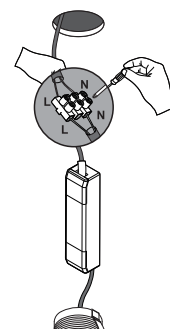


Connect wires

4

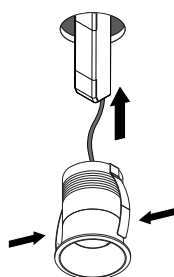



Press brackets together
& insert it into the hole

5

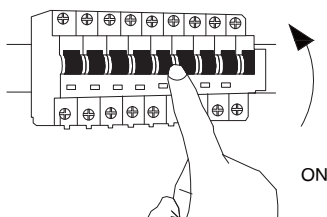

Turn on the general switch

6

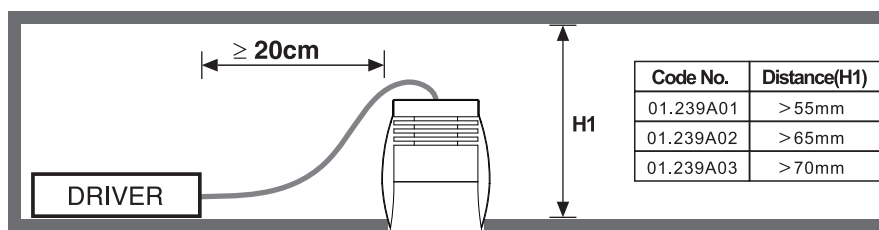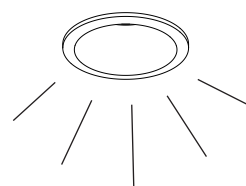

Code No.	Distance(H1)
01.239A01	> 55mm
01.239A02	> 65mm
01.239A03	> 70mm

