



1

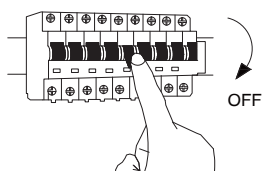

Turn off the general switch


2

| Code No.        | Cut Size. |
|-----------------|-----------|
| 9040116-9040117 | 72*31mm   |
| 9040118-9040119 | 108*31mm  |
| 9040120-9040121 | 198*31mm  |

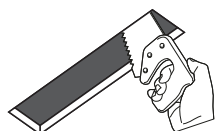


Create a CutOut

3

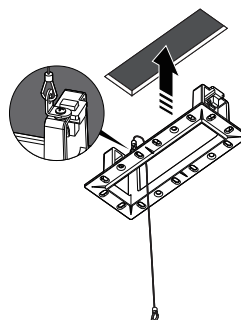


Connect the assisting rope

4

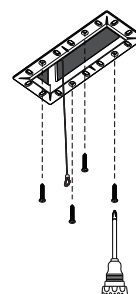


Press brackets together & insert it into the hole

5

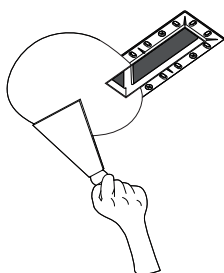


Apply a sealer

6

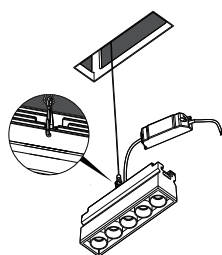


Connect the driver

7

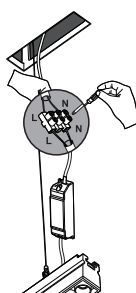


Connect wires

8

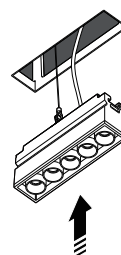

Fix it into place

9

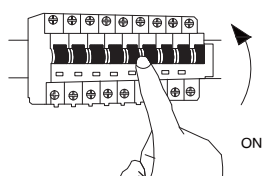

Turn on the general switch

10

