



1

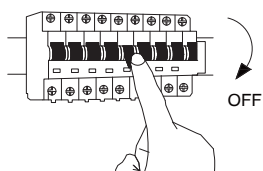

Turn off the general switch


2

Code No.	Cut Size.
9040116-9040117	72*31mm
9040118-9040119	108*31mm
9040120-9040121	198*31mm

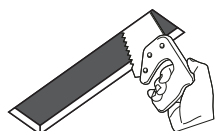


Create a CutOut

3

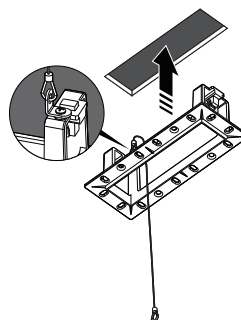


Connect the assisting rope

4

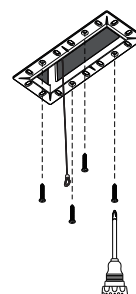


Press brackets together & insert it into the hole

5

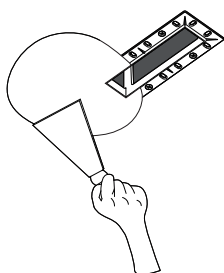


Apply a sealer

6

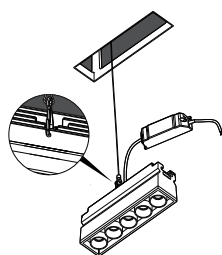


Connect the driver

7

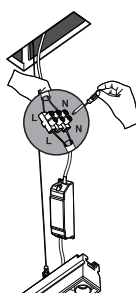


Connect wires

8

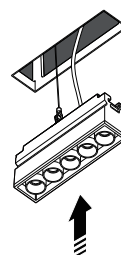

Fix it into place

9

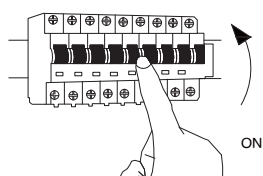

Turn on the general switch

10

