
NOVA LUCE


9043302

1

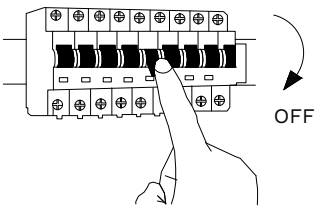


Turn off the general switch

2

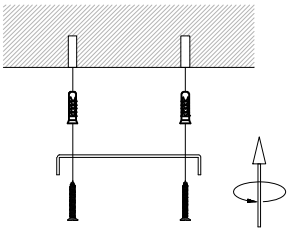


Mark & drill holes
Apply plastic anchors & tie up screws

3

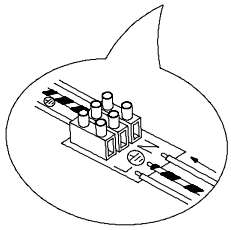


Connect wires

4

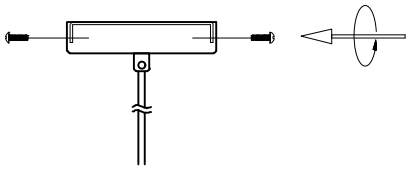


Tie up side screws

5

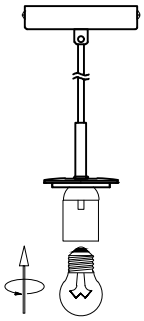


Insert bulb by rotate

6

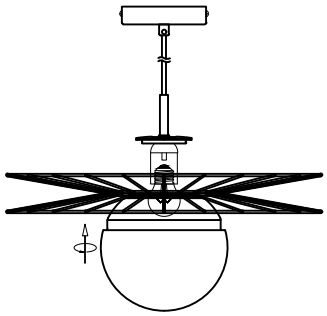

Tie up the cap into place

7

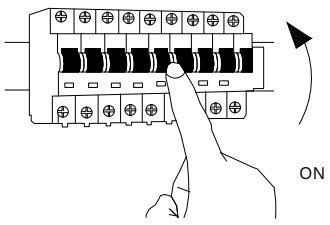

Turn on the general switch