


NOVA LUCE


9051106

1

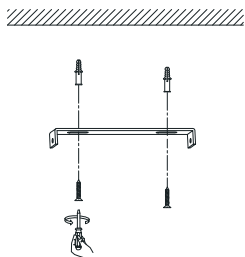


Drill holes & apply plastic anchors
With screws

2

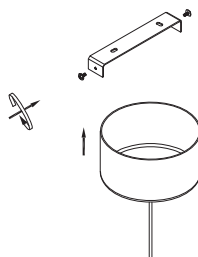

Apply the side screws

3

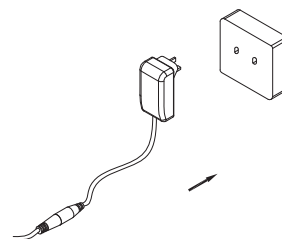

Plug it in

