



1

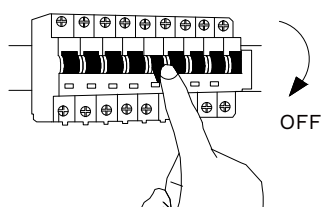


Turn off the general switch

2

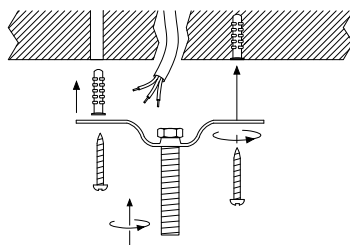


Drill holes & apply plastic anchors
With screws

3

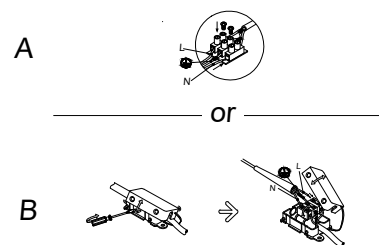


Connect the wires

4

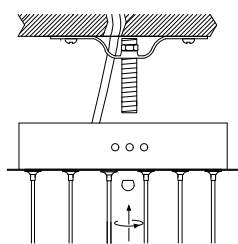


Apply the canopy in place

5

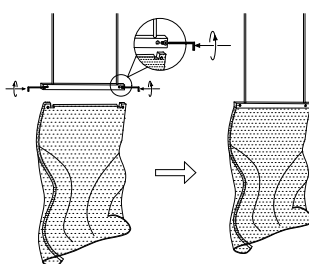


Apply the glass in to place

6

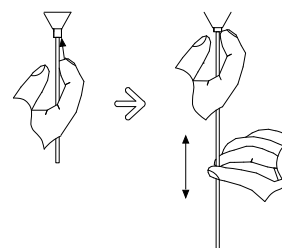

Adjust the wires

7

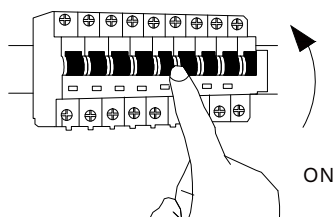

Turn on the general switch

