



1

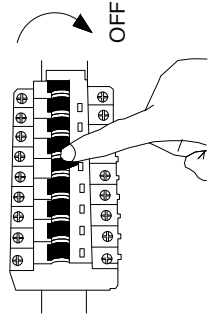


Turn off the general switch

2

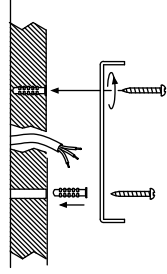


Drill holes apply plastic anchors
With screws

3

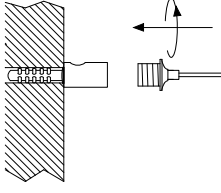


By rotating apply the canopy

4

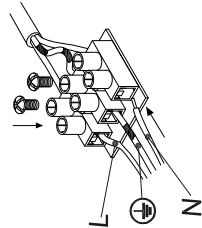


Connect the wires

5

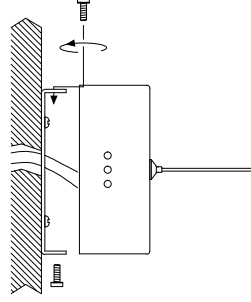


Apply the side screws

6

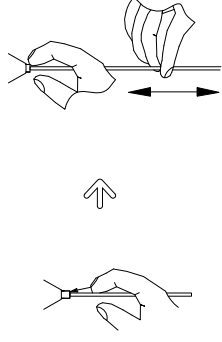

Adjust the wire

7

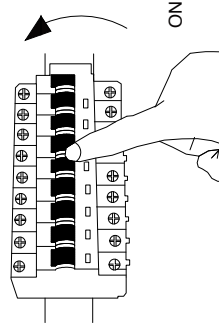

Turn on the general switch

