



NOVA LUCE

9060100 9060200
9060300 9060400




1

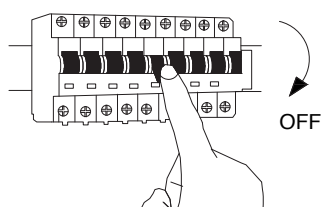


Turn off the general switch

2

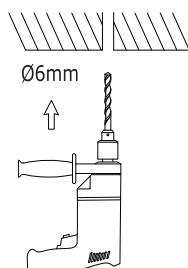


Drill holes

3

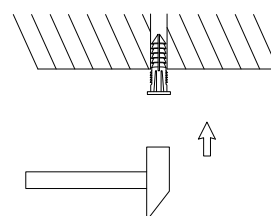


Apply plastic anchors

4

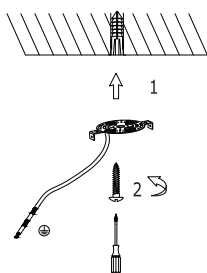


Apply the element with the screw

5

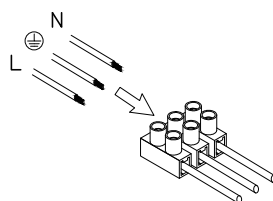


Connect the wires

6

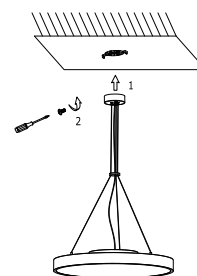

Apply the side screws

7

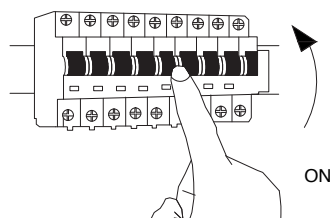

Apply the side screws

