


NOVA LUCE


9061136 9061137
9061138 9061139
9061140 9061141

1

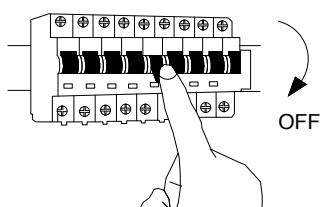


Turn off the general switch

2

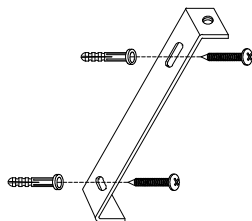


Drill holes & apply plastic anchors
With screws

3

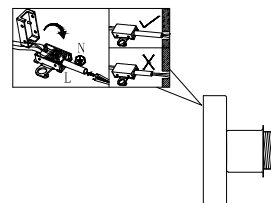


Connect the wires

4

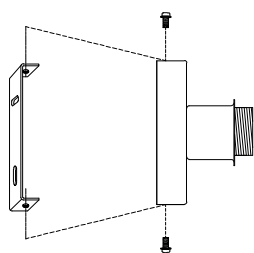


Apply the side screws

5

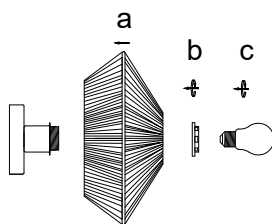

Apply the elements with the bulb

6

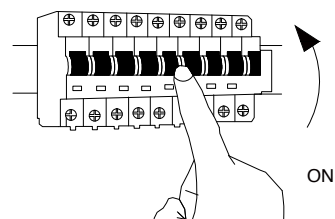

Turn on the general switch

