
NOVA LUCE


9061163

1

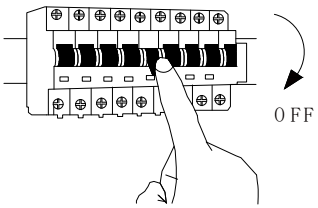


Turn off the general switch

2

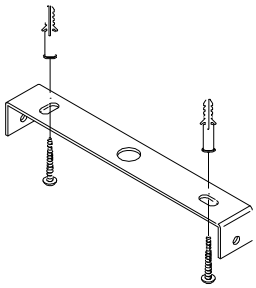


Drill holes & apply plastic anchors
With screws

3

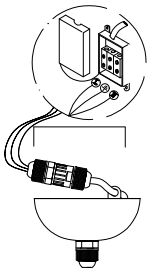


Connect the wires

4

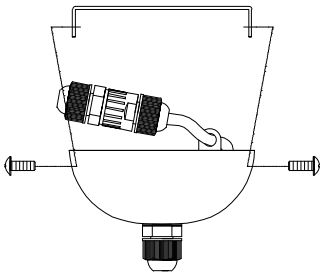


Apply the side screws

5

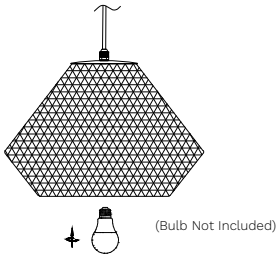


Apply the bulb

6

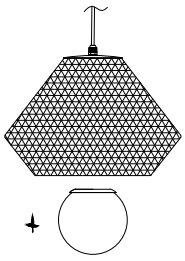


Apply the shade

7

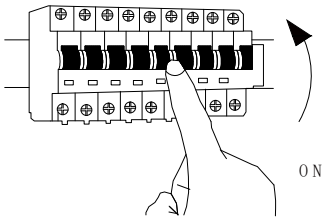

Turn on the general switch

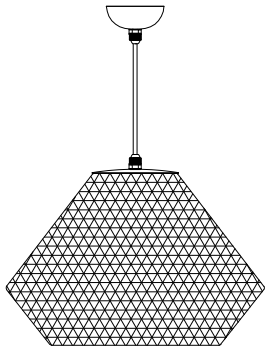

www.novaluce.com