
NOVA LUCE


9070141

1

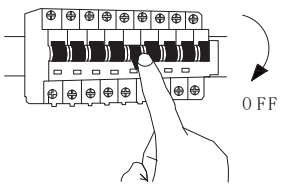


Turn off the general switch

2

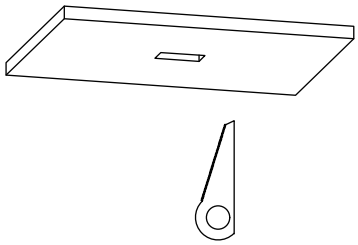


Make a 3.7x3.7 cm CutOut

3

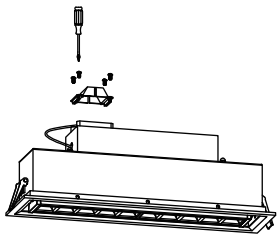


Tie up screws

4

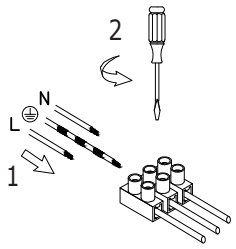


Connect the wires

5

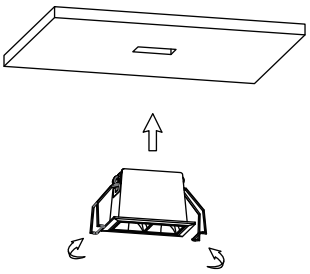


Insert luminaire into place
by pressing brackets together

6




Fix it into place

7

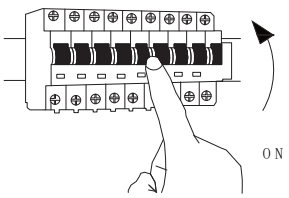

Turn on the general switch

8

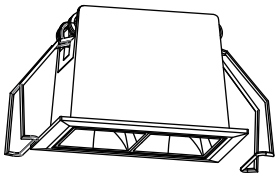

www.novaluce.com