



1

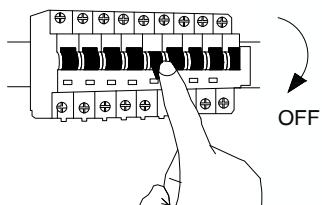


Turn off the general switch

2

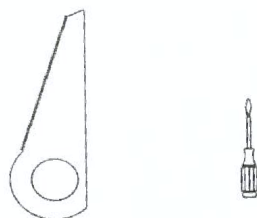


Create holes 0.6 cm

3

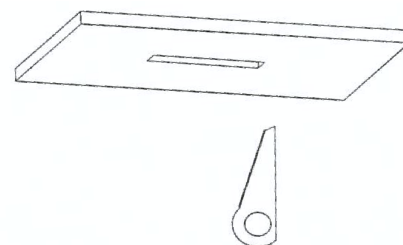


Create a CutOut Ø3.5 cm

4

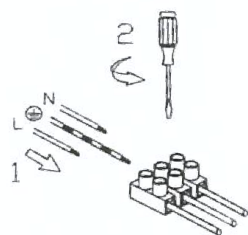


Connect wires

5

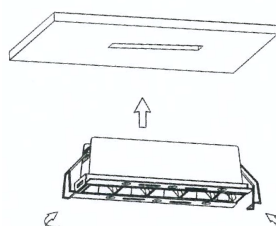


Press the brackets together
& fix the luminaire into place

6

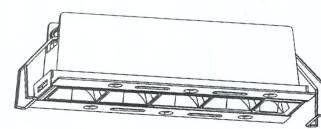


Make sure it is place
on the right place

7

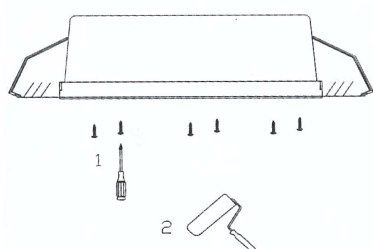

Tie up screws to make it stable
& complete the instalation

8

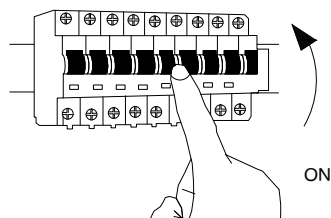

Turn on the general switch

